

# FINAL REPORT

Demonstration of New, Highly Perchlorate-Selective Ion  
Exchange Resin Coupled with Resin-Optimized, Single-Vessel  
Engineering Design

ESTCP Project ER-200542

March 2013

Jim Summerfield  
The Dow Chemical Company

*This document has been cleared for public release*



Report Documentation Page				Form Approved OMB No. 0704-0188	
Public reporting burden for the collection of information is estimated to average 1 hour per response, including the time for reviewing instructions, searching existing data sources, gathering and maintaining the data needed, and completing and reviewing the collection of information. Send comments regarding this burden estimate or any other aspect of this collection of information, including suggestions for reducing this burden, to Washington Headquarters Services, Directorate for Information Operations and Reports, 1215 Jefferson Davis Highway, Suite 1204, Arlington VA 22202-4302. Respondents should be aware that notwithstanding any other provision of law, no person shall be subject to a penalty for failing to comply with a collection of information if it does not display a currently valid OMB control number.					
1. REPORT DATE <b>MAR 2013</b>		2. REPORT TYPE		3. DATES COVERED <b>00-00-2013 to 00-00-2013</b>	
4. TITLE AND SUBTITLE <b>Demonstration of New, Highly Perchlorate-Selective Ion Exchange Resin Coupled with Resin-Optimized, Single-Vessel Engineering Design</b>				5a. CONTRACT NUMBER	
				5b. GRANT NUMBER	
				5c. PROGRAM ELEMENT NUMBER	
6. AUTHOR(S)				5d. PROJECT NUMBER	
				5e. TASK NUMBER	
				5f. WORK UNIT NUMBER	
7. PERFORMING ORGANIZATION NAME(S) AND ADDRESS(ES) <b>The Dow Chemical Company,2030 Dow Center ,Midland,MI,48674</b>				8. PERFORMING ORGANIZATION REPORT NUMBER	
9. SPONSORING/MONITORING AGENCY NAME(S) AND ADDRESS(ES)				10. SPONSOR/MONITOR'S ACRONYM(S)	
				11. SPONSOR/MONITOR'S REPORT NUMBER(S)	
12. DISTRIBUTION/AVAILABILITY STATEMENT <b>Approved for public release; distribution unlimited</b>					
13. SUPPLEMENTARY NOTES					
14. ABSTRACT					
15. SUBJECT TERMS					
16. SECURITY CLASSIFICATION OF:			17. LIMITATION OF ABSTRACT <b>Same as Report (SAR)</b>	18. NUMBER OF PAGES <b>69</b>	19a. NAME OF RESPONSIBLE PERSON
a. REPORT <b>unclassified</b>	b. ABSTRACT <b>unclassified</b>	c. THIS PAGE <b>unclassified</b>			

## Table of Contents

List of Acronyms and Abbreviations	iii
List of Figures	iv
List of Tables	iv
1 Introduction	1
1.1 Background	1
1.2 Objectives of the Demonstration	1
1.3 Regulatory Drivers	1
1.4 Stakeholder/End-User Issues	2
2 Technology Description	2
2.1 Technology Overview	2
2.2 Technology Development	13
2.3 Advantages and Limitations of the Technology	14
3 Demonstration Design	16
3.1 Performance Objectives	16
4 Facilities/Site Description	17
4.1 Facility/Site Location and Operation	18
5 Test Design	19
5.1 Pre-Demonstration Testing and Analysis	19
5.2 Operational Testing	20
5.2.1 Demonstration Set-Up and Start-Up	20
5.2.2 Period of Operation	21
5.2.3 Treatment Rate	23
5.2.4 Residuals Handling	23
5.2.5 Operating Parameters for the Technology	23
5.2.6 Experimental Design	24
5.2.7 Performance Monitoring	25
5.3 Demobilization	27
5.4 Quality Assurance/Quality Control	27
5.5 Health and Safety Plan (HASP)	27
5.6 Management and Staffing	27
5.7 Demonstration Schedule	28
6 Performance Assessment	28
6.1 Performance Criteria	28
6.2 Performance Confirmation Methods	29
6.3 Data Analysis, Interpretation and Evaluation	30
6.4 Performance Data – West Valley Water District	30
6.5 Performance Data – City of Colton, CA	32
6.6 Performance Data – City of Rialto, CA	34
7 Cost Assessment	35
7.1 Cost Reporting	35
7.2 Cost Analysis	35

8	Implementation Issues	36
8.1	Environmental Checklist	36
8.2	Other Regulatory Issues	36
8.3	End-User Issues	36
9	References	37
10	Points of Contact	38
11	Conclusion	39
	Appendix A. Analytical Methods Supporting the Sampling Plan	40
	Appendix B. Quality Assurance Plan (QAPP)	53
	Appendix C. Health and Safety Plan (HASP)	58
	Appendix D. Water Sampling Procedure	60

## List of Acronyms and Abbreviations

Acronym	Definition
BV	Bed Volume
CADHS	California Department of Health Services
Cap	Loading Capacity of resin
CAPEX	Capital Expenditure
Cl <sup>-</sup>	Chloride Anion
DVB	Divinyl Benzene
eq	equivalent(s)
ft	Foot (feet)
gal	gallon(s)
gpm	gallons per minute
HASP	Health and Safety Plan
HCO <sub>3</sub> <sup>-</sup>	Bicarbonate Anion
in	inch(es)
l, L	liter(s)
lbs	pound(s)
MCL	Maximum Contaminant Level
ml	milliliter(s)
mm	millimeter(s)
M <sub>p</sub>	Mass of perchlorate loaded on resin over time
μg	microgram(s)
Na <sup>+</sup>	Sodium Cation
NH <sub>4</sub> ClO <sub>4</sub>	Ammonium Perchlorate
NO <sub>3</sub> <sup>-</sup>	Nitrate Anion
NPDES	National Pollutant Discharge Elimination System
NSF	National Sanitation Foundation
OH <sup>-</sup>	Hydroxide Anion
OPEX	Operating Expenditure
QAPP	Quality Assurance Project Plan
P <sub>i</sub>	Inlet perchlorate concentration
P <sub>o</sub>	Outlet perchlorate concentration
ppm	parts per million
SO <sub>4</sub> <sup>2-</sup>	Sulfate Anion
USEPA	United States Environmental Protection Agency
V <sub>r</sub>	Volume of resin
V <sub>w</sub>	Volume of water treated by resin over time
WVWD	West Valley Water District

**Table of Common Ion Exchange Terms**

<b>Bed Volume</b>	The term bed volume in ion exchange means the three dimensional volume occupied by the ion exchange resin (including the void volume between beads) when in a settled or packed state. In a packed bed column, the ion exchange bed volume will be very close to the volume of the vessel.
<b>Break through</b>	Breakthrough means when the contaminant of interest (in this case perchlorate ion) appears in the column effluent at values greater than the baseline “leakage” level.
<b>Capacity</b>	Capacity is the mass of contaminant that can be loaded onto a unit of ion exchange resin. It is typically described in terms or chemical equivalents per liter of resin. In this program, it will also describe in pounds perchlorate per cubic foot of ion exchange resin (lb/ft <sup>3</sup> ).
<b>Chromatographic Peaking</b>	This is when the level of a given species exiting an ion exchange column greater than the level of that species in the feed water. This occurs when a given ionic species is removed from the feed water and concentrated on the ion exchange resin, then subsequently displaced by another species due to equilibrium (thermodynamics).
<b>Distribution</b>	Distribution is the dispersal of liquid over the ion exchange resin and is concerned with the percent of the resin that is exposed to a common flow.
<b>Exhaustion</b>	Exhaustion is the point at which the level of contaminant exiting the column is the same as the level entering the column. The resin is thus at equilibrium with the influent liquid and no further ion exchange will occur.
<b>Fluidization</b>	The opposite of packed. The beads move freely due to hydraulic conditions. This typically occurs when liquids are fed in an upflow direction at low flow rates. This is the state at which the flow and drag forces on the ion exchange resin equal the force of gravity.
<b>In-situ Regeneration</b>	Regeneration that occurs inside a fixed ion exchange column. (See Regeneration).
<b>Ionic Profile</b>	This is the distribution of ions that are loaded onto the ion exchange bed along the bed’s length (height in a vertical column). The ionic composition of the ion exchange resin will vary at different points along the height of the column based on the feed water composition and the equilibrium constants for a given ion exchange resin.
<b>Lateral</b>	This is the pipe structure inside an ion exchange column that provides “distribution” of water over the resin bed.
<b>Leakage</b>	This is the level of contaminant that exits the column. Equilibrium leakage is the result of the ionic composition of the resin and the ionic composition of the surrounding water. It is based on thermodynamics. The kinetic leakage is the level of ionic contaminant that is not removed during its travel through the ion exchange bed.
<b>Linear Velocity</b>	This is the one dimensional velocity of liquid through the column. It is typically expressed as meters per second (m/s) but can also be

	expressed as gpm/ft <sup>2</sup> cross-sectional area of the column.
<b>Loading Profile</b>	This is the ionic profile of the ion exchange resin at any point during the loading cycle, when contaminant is being removed from the feed water.
<b>Packed Bed</b>	An ion exchange system where the volume of the ion exchange resin employed is very close to the volume of the vessel in which it is used.
<b>Polishing</b>	Polishing is the expression used when the minute remainder of a contaminant is removed by a highly regenerated portion of ion exchange resin.
<b>Regeneration</b>	This is the chemical act of reversing the ion exchange reaction by adding an excess of a chemical to overcome the resins selectivity for a contaminant thus removing that contaminant from the ion exchange resin and replacing it with an ion which is more favorable in the effluent of the ion exchange unit.
<b>Regenerant</b>	The chemical used to reverse the ion exchange reaction and remove the contaminant from the resin.
<b>Service Cycle</b>	The period during which contaminant is being removed from the feed water. This is opposite the regeneration cycle or replacement cycle.
<b>Strainer</b>	A form of liquid distributor that is used with a packed bed ion exchange unit. Strainers are typically plastic “caps” with slots in them. They are to retain the resin inside the packed bed vessels and allow water to flow through.
<b>Utilization</b>	This is the percent of the available ion exchange capacity that is used. Full utilization would be 100% of the available ion exchange capacity when equilibrium is taken into account.

## List of Figures

<b>Figure</b>	<b>Page</b>
1. Chemical description of a strongly basic anion exchange resin.	2
2. Typical Lead-Lag Carbon Vessel Design currently used for perchlorate removal.	4
3. Example of a typical Counter-Current Regenerated Ion Exchange Vessel.	5
4. Typical Packed-Bed Ion Exchange Vessel.	6
5a. Schematic of vessel for ESTCP demonstration project. Normal operation.	7
5b. Schematic of vessel for ESTCP demonstration project. Service mode.	7
6a. Engineering drawing for ESTCP vessel skid, View #1	8
6b. Engineering drawing for ESTCP vessel skid, View #2	9
6c. Engineering drawing for ESTCP vessel skid, View #3	10
6d. Engineering drawing for ESTCP vessel skid, View #4	11
7. Resin exhaustion and replacement process for ESTCP demonstration project.	12
8. Pilot column employing proposed vessel design.	14
9. West Valley Water District (WVWD) Well #11.	18
10. City of Colton, Dominick Reservoir and Wells #15 and #17 Treatment System.	18
11. City of Rialto Well #4.	19
12. Face Piping and Well Connection – West Valley Water District	21
13. Process Flow Diagram for ESTCP Resin Loading and Service Vessel.	22
14. Time Line for ESTCP Demonstration Project.	23
15. Daily Log Sheet for ESTCP Demonstration Project.	26
16. West Valley Water District – Cycle #1	31
17. West Valley Water District – Cycle #2	31
18. West Valley Water District – Cycle #3	32
19. City of Colton CA – Cycle #1	33
20. City of Colton CA – Cycle #2	33
21. City of Rialto CA – Cycle #1	34

## List of Tables

<b>Table</b>	<b>Page</b>
3-1. Performance Objectives.	16
4-1. Water Analyses for the ESTCP Demonstration Sites.	17
5-1. Perchlorate Loading Predictions for ESTCP Demonstration Sites.	20
5-2. Management and Staffing for ESTCP Demonstration Project.	27
6-1. Performance Criteria for ESTCP Demonstration Project.	28
6-2. Expected Performance and Performance Confirmation Methods.	29
7-1. Cost Tracking for ESTCP Demonstration Project	35
10-1. Points of Contact	38



# **1 Introduction**

## **1.1 Background**

Ammonium perchlorate is used in the formulation for solid rocket fuel to propel military projectiles. This formulation has been demonstrated to be highly effective, stable under ambient conditions, and low in toxicity compared to previous liquid formulations. For these reasons, ammonium perchlorate is a very important material to our military and national security. Through handling and maintenance practices believed to be satisfactory based on the low toxicity profile of ammonium perchlorate, this material was introduced to the environment. Because of ammonium perchlorate's solubility in water and stability, it has persisted in the environment and has migrated to aquifers in populated areas and hence entered some potable water sources. Health studies have found that perchlorate can mimic iodine in the human thyroid and potentially disrupt thyroid function.<sup>a</sup> For this reason, many states and the United States Environmental Protection Agency (USEPA) are considering creating regulations on the amount of perchlorate allowed in drinking water.

Through litigation, much of the financial burden of removing perchlorate from the environment has fallen to the Department of Defense (DoD). As this trend is likely to continue, it is important that the most cost effective method of removing perchlorate from drinking water be determined and employed. This project will demonstrate the most cost effective method of employing ion exchange to remove low levels of perchlorate from drinking water. A highly-perchlorate-selective ion exchange resin will be used in a novel vessel, designed to fully utilize the resins' capacity while minimizing operational problems encountered with current lead-lag, dual vessel systems. While this project will employ resin on a once-use basis, the vessel design can be successfully used for external regeneration operating models. It is not suitable for in-situ resin regeneration.

## **1.2 Objectives of the Demonstration**

It is the objective of this project is to demonstrate a novel vessel design and operating practice which can fully utilize the capacity of highly perchlorate selective ion exchange resin while mitigating other operational problems that often result in premature resin replacement. This will be done at three municipalities in Southern California (City of Rialto, City of Colton, and West Valley Water District) at full-scale (1250 gpm). In addition to minimizing cost, this vessel design is both small in foot print and low in profile which is beneficial for aesthetics as many of the wells are located in residential areas.

## **1.3 Regulatory Drivers**

While no national regulations currently exist for the amount of perchlorate allowed in drinking water, several states including California have implemented a drinking water limit on perchlorate. The Maximum Contaminant Level (MCL) for perchlorate in California is 6 ppb and levels as low as 1 ppb have been suggested, but not implemented. Low levels of perchlorate in ground water coupled with low MCL's will increase the number of drinking water wells that require treatment. Ion exchange

has been demonstrated to be a very effective process technology for these conditions and is quite applicable as a well-head treatment technology based on effectiveness, cost, and scalability.

#### 1.4 Stakeholder/End-user Issues


This demonstration should yield accurate cost and operational data which will enable both the DoD and water utilities to make decisions about what technology to employ for a given well. It will also validate the predictive models used in making these decisions such that accurate costs can be predicted with just a simple water analysis.

## 2 Technology Description

### 2.1 Technology Overview

As previously mentioned, ammonium perchlorate ( $\text{NH}_4\text{ClO}_4$ ) is both extremely soluble in water and very stable. In solution, it will exist as a soluble salt of perchlorate anion ( $\text{ClO}_4^-$ ) and a counter cation, depending on the ambient ground water. As perchlorate exists as a charged anion, it can be removed from solution by ion exchange technology.

Ion exchange resins are insoluble polymer beads that have the ability to reversibly exchange ions. The beads are in the range of 0.35 mm to 1.1 mm in diameter and typically used in packed beds of 24in. to 72in. in depth. Most commercial ion exchange resins used in water treatment are made of a copolymer of styrene and divinylbenzene (DVB) that is functionalized to fix the exchange site to the copolymer backbone. Strongly acidic cation exchange resins possess a sulfonic acid exchange site while strongly basic anion exchange resins possess a quaternary amine exchange site. We will be employing strongly basic anion exchange resin in this demonstration program. Figure 1 shows the chemical composition of a standard strongly basic anion exchange resin. In regenerable applications, the exchangeable ion is determined by

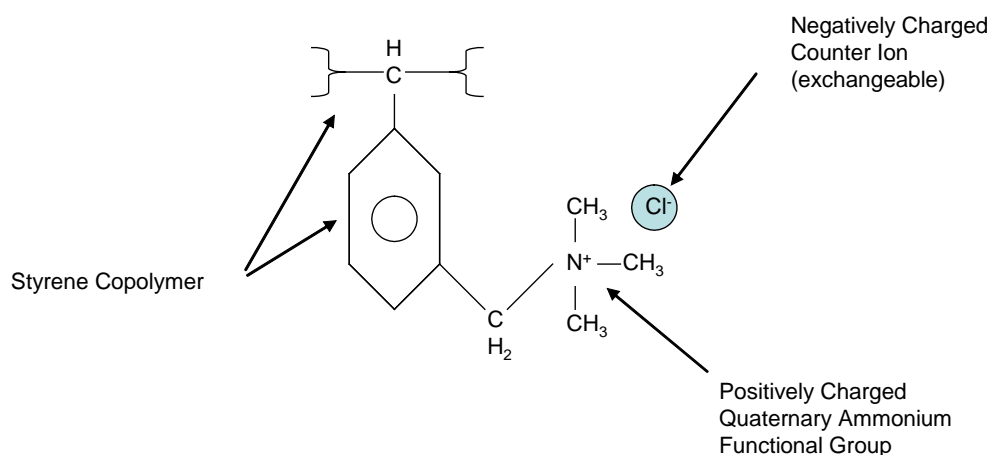


**Figure 1.** Chemical description of a strongly basic anion exchange resin.

the choice of regenerating reagent. Due to thermodynamic considerations that will not be discussed here, ion exchange resins have a higher selectivity for some ions over others. A typical strongly basic anion exchange resin has the following selectivity profile:



It is this difference in selectivity that allows ion exchange resin to be used to remove low levels of one ion in the background of higher concentrations of another ion. The physical and chemical composition of the ion exchange resin can be manipulated to affect this relative selectivity. In the case of this demonstration project, the resin employed has been developed specifically to have a very high selectivity for perchlorate ion. This is marketed commercially as Amberlite™ PWA2. It should be noted that the perchlorate-selective ion exchange resin being used in this project has been utilized commercially for perchlorate removal. Hence, the resin is not the focus of this demonstration. It is the single vessel design and how the design maximizes the use of the ion exchange resin on which we will concentrate in this demonstration. In this application, the exchange reaction can be written as:




In this case, sodium ion (Na+) has been used to represent the counter-ion to maintain electrical neutrality in the chemical equation. R represents the immobile ion exchange site bound to the resin copolymer.

The selectivity for this highly perchlorate selective resin is as follows:



The current practice for employing ion exchange resin for the removal of perchlorate from drinking water is to use standard activated carbon service vessels in a lead-lag configuration (2 vessels in series) with a minimum of 3 ft of bed depth per vessel. When the lead vessel is exhausted, the polishing vessel is placed in the lead position, the resin in the lead vessel is replaced with fresh resin, and this vessel is placed in the polishing position. These vessels are typically 10-12ft in diameter with a 7-8 ft straight side. They also employ vertical strainers mounted in the bottom dish to retain the resin inside the vessel. These vertical strainers result in poor distribution of water over the media and inefficient use of this media. In addition, these vessels are used in a down-flow mode with water entering the top of the vessels and exiting to bottom. This operational mode has two deficiencies. First, the long operating time in the down-flow mode tends to compact the resin and increase pressure drop. Second, there is a tendency to build up suspended solids on the top of the bed. Both of these issues require back wash of the resin bed to mitigate the effects. This back washing can fluidize the ion exchange bed and disturb the resin loading profile. In this manner, some of the resin that is saturated in perchlorate can end up residing in the bottom of the vessel, near the exit. This will result in increased leakage and potentially


premature resin replacement. Figure 2 is a schematic of standard activated carbon vessels employed in the lead-lag configuration. Additionally, the use of two large vessels requires more area for foot print, has a higher profile, and utilizes more resin (greater pressure drop and pumping costs) than the proposed technology.

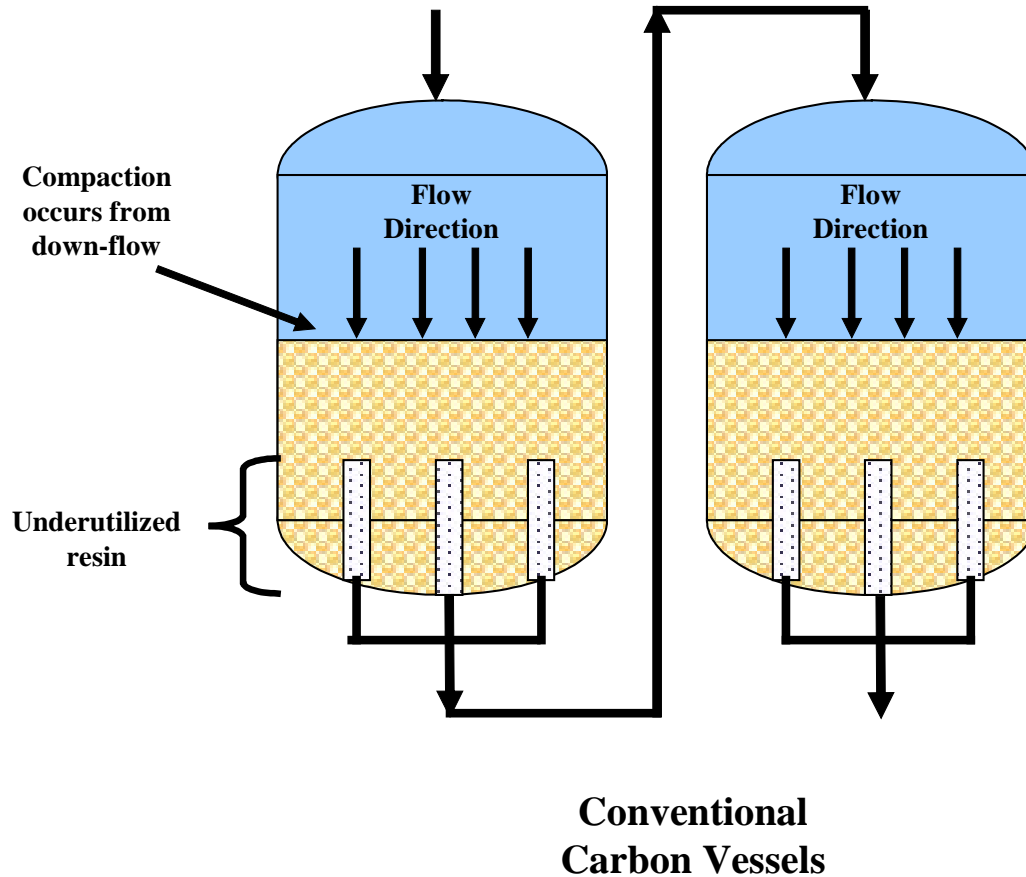


**Figure 2.** Typical Lead-Lag Carbon Vessel design

Counter-current regenerated ion exchange systems were developed in the 1950's to decrease leakage of unwanted ions and to increase chemical efficiency. Previously, only co-current regenerated ion exchange systems existed. In a co-current regenerated system, the flow directions of the service cycle and the regeneration cycle are the same, i.e. down-flow. During regeneration, the top of the resin bed always sees the virgin regeneration solution while the bottom of the bed sees a mixture of diluted regenerant and liberated ions from the regeneration process. Thus, the bottom of the bed is less regenerated than the top and contains an inventory of unwanted ions that "leak" off the resin during the subsequent service cycle. A counter-current regenerated system uses opposite directions for the service cycle and the regeneration cycle. In this manner, the resin at the exit (top) of the bed during the service cycle is the resin at the entrance to the bed during the regeneration cycle. Thus, it is the resin that sees the virgin regenerant solution and is highly regenerated. Because the resin has a very low inventory of unwanted ions present during the subsequent service

cycles, “leakage” of unwanted ions is very low. The key tenant of these counter-current systems was to maintain the ion profile of the ion exchange resin bed so highly regenerated resin would always be present at the exit of the bed to polish the treated water to very low levels of unwanted ions. Also, any partially exhausted resin would reside at the entrance to the bed. The early systems employed down-flow service cycles and up-flow regeneration with either a downward “blocking” flow of water or air to hold the bed in a packed state during regeneration. In either case, a mid-lateral was employed to remove liquid from the system at a place that was neither the top nor the bottom of the vessel. A further refinement to this design was the split-flow, counter-current regenerated system. In this design, the mid-lateral was placed below the surface of the resin bed such that the top of the resin bed was regenerated in a co-flow manner and the bottom of the bed was regenerated in a counter-current manner. Figure 3 is a schematic of this type of counter-current regenerated ion exchange bed. Finally, the reverse-flow, counter-current regenerated, packed-bed demineralizer was developed. This design used fixed nozzle (strainer) plates to keep the resin profile intact and removed the need for an internal mid-lateral. It also employed up-flow service and down-flow regeneration. Figure 4 is a schematic of a typical packed-bed, ion exchange vessel. In the 1960’s, the mixed bed demineralizer was developed. This employed two types of ion exchange resin (cation and anion exchange resin) in the same bed. These resins needed to be separated prior to regeneration and then the respective fractions needed to be held in position during regeneration as not to allow cross-contamination of the resin.

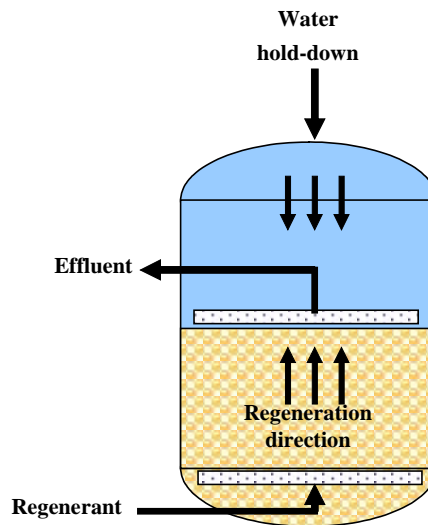


**Figure 3.** Example of a typical Counter-Current Regenerated Ion Exchange Vessel.

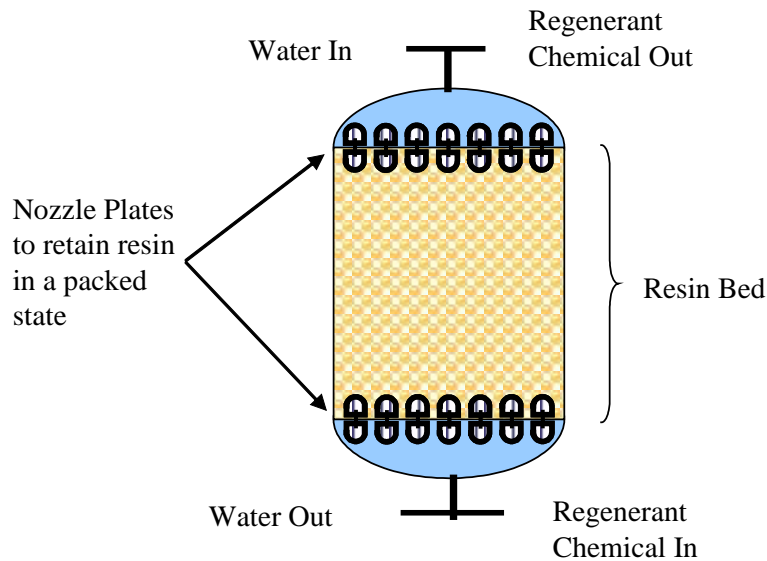


**Figure 4.** Typical Packed-Bed Ion Exchange Vessel.


Elements of each of these technologies were drawn upon to create a vessel design which would optimize the use of, once-use resin. Figures 5a and 5b show a schematic of this vessel design. The design is based on a reverse-flow, packed-bed system. The resin (5 ft bed depth) is contained between two fixed, flat nozzle plates and in this manner the resin loading profile is maintained intact. Up-flow operation allows bed decompaction during any disruption of flow, thus reducing the need to backwashing to reduce bed compaction. An unscreened central internal lateral is used to remove the bottom (exhausted) portion while the top portion of the bed is retained intact. While in the service mode (Figure 5b) with water flowing up and packing the bed against the upper nozzle plate, the valve on the unscreened central lateral is opened. Resin below this lateral is flushed out of the system and is collected for disposal while all resin above this central lateral remains in the vessel, packed against the upper nozzle plate. After the exhausted resin has been removed from the bed, the top layer of resin is allowed to fall to the bottom (entrance) and fresh resin can be added to the top to create a new polishing zone. This allows lead-lag operation inside a single vessel. Figures 6a, 6b, 6c and 6d show the basic engineering drawings of the vessel to be used on this demonstration project. Figure 7 shows the various stages of operation and how the resin bed is managed to remove the exhausted resin while keeping the fresh resin in the vessel.

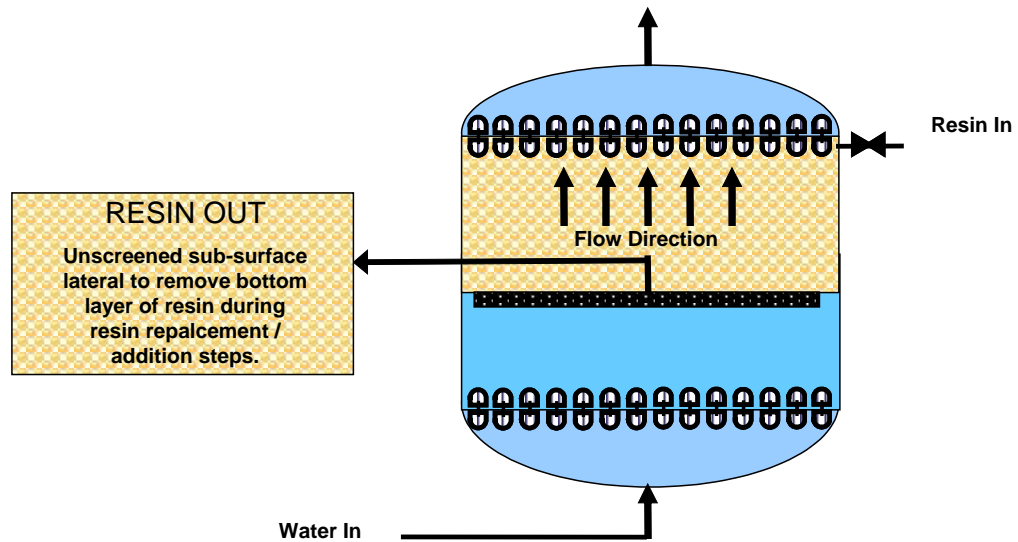

**Figure 5a.** Schematic of vessel for ESTCP demonstration project. Normal operation.

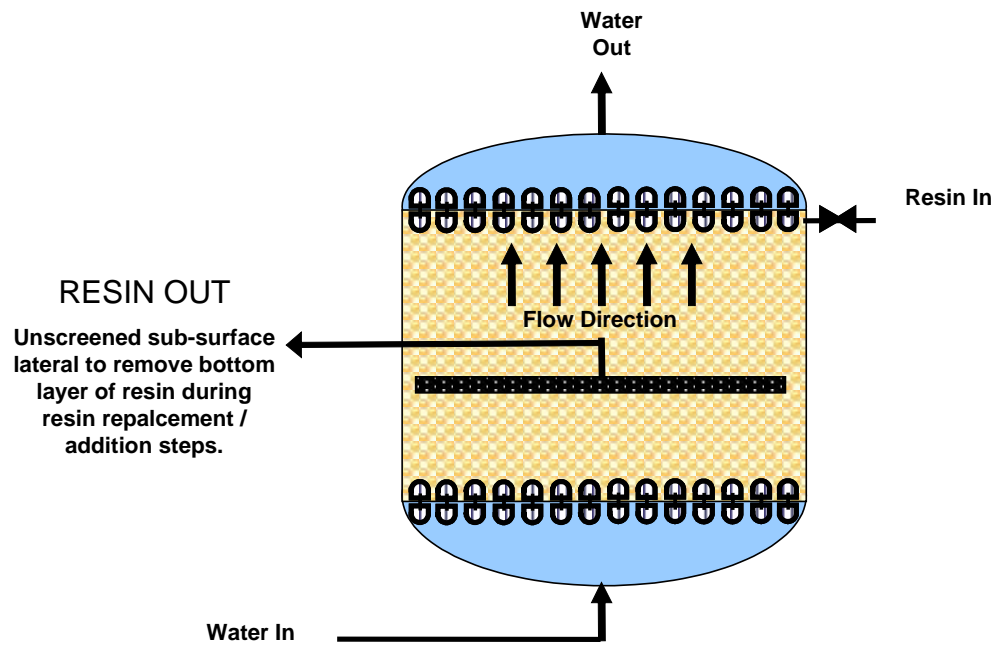


**Figure 5b.** Schematic of vessel for ESTCP demonstration project. Service mode.

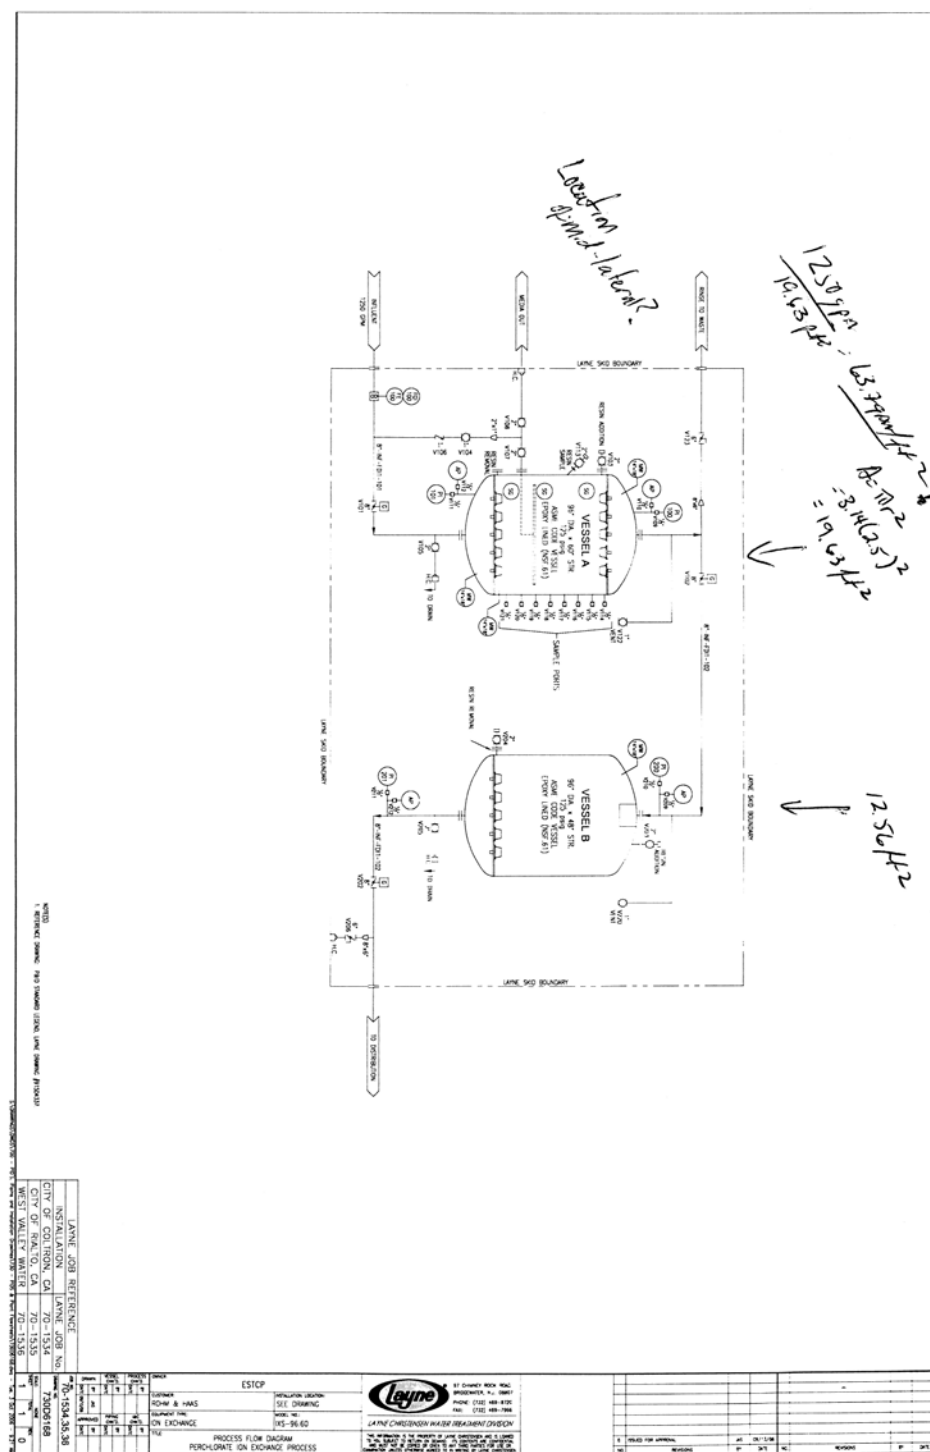


**Figure 6a.** Engineering drawing of ESTCP vessel skid. View #1




**Figure 6b.** Engineering drawing of ESTCP vessel skid, View #2

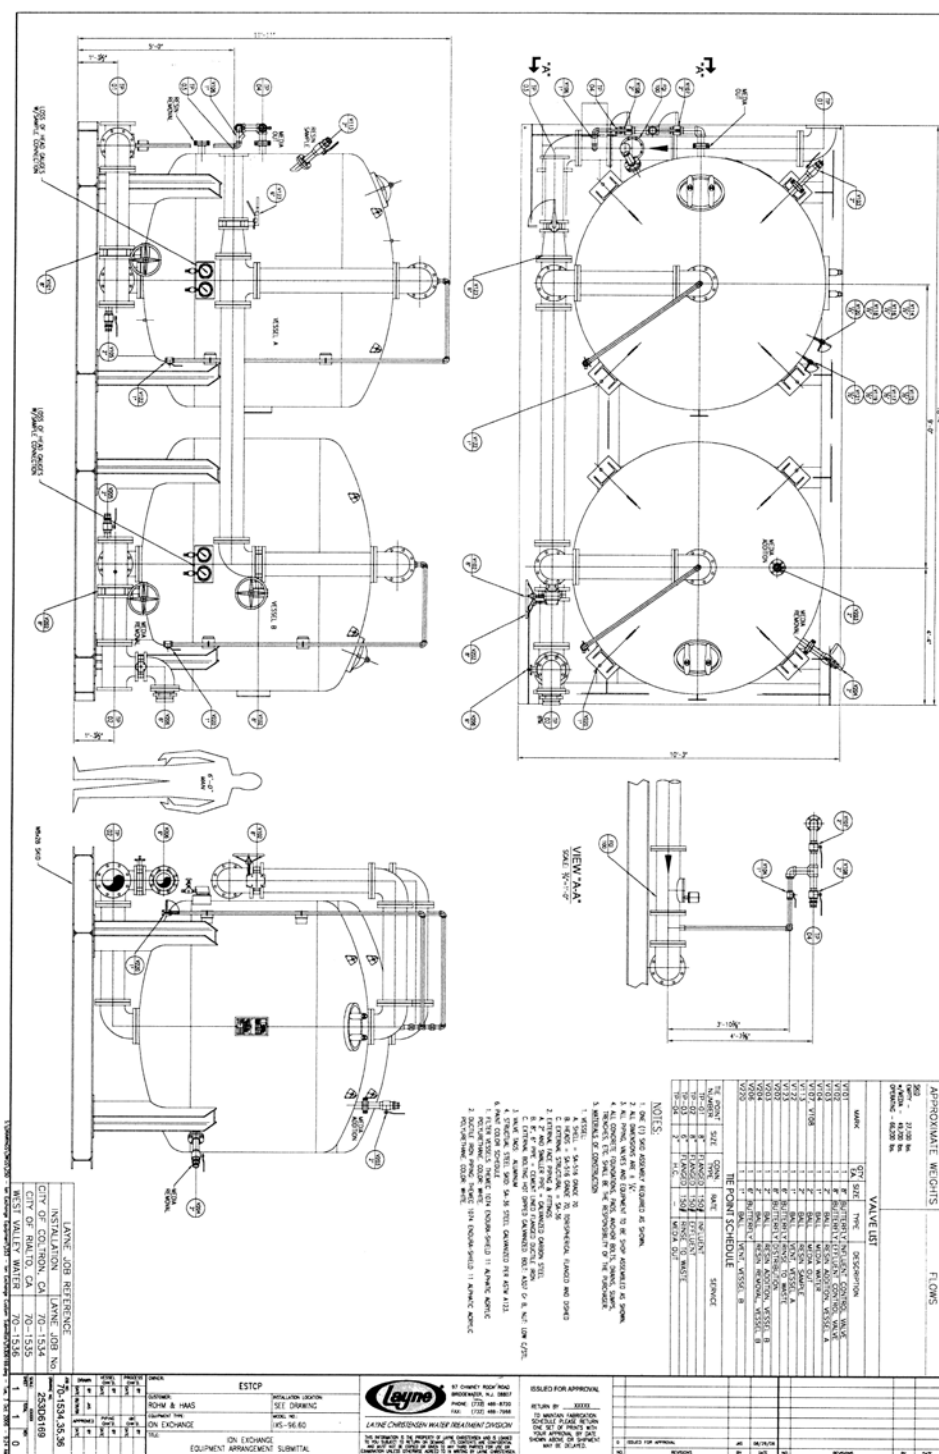

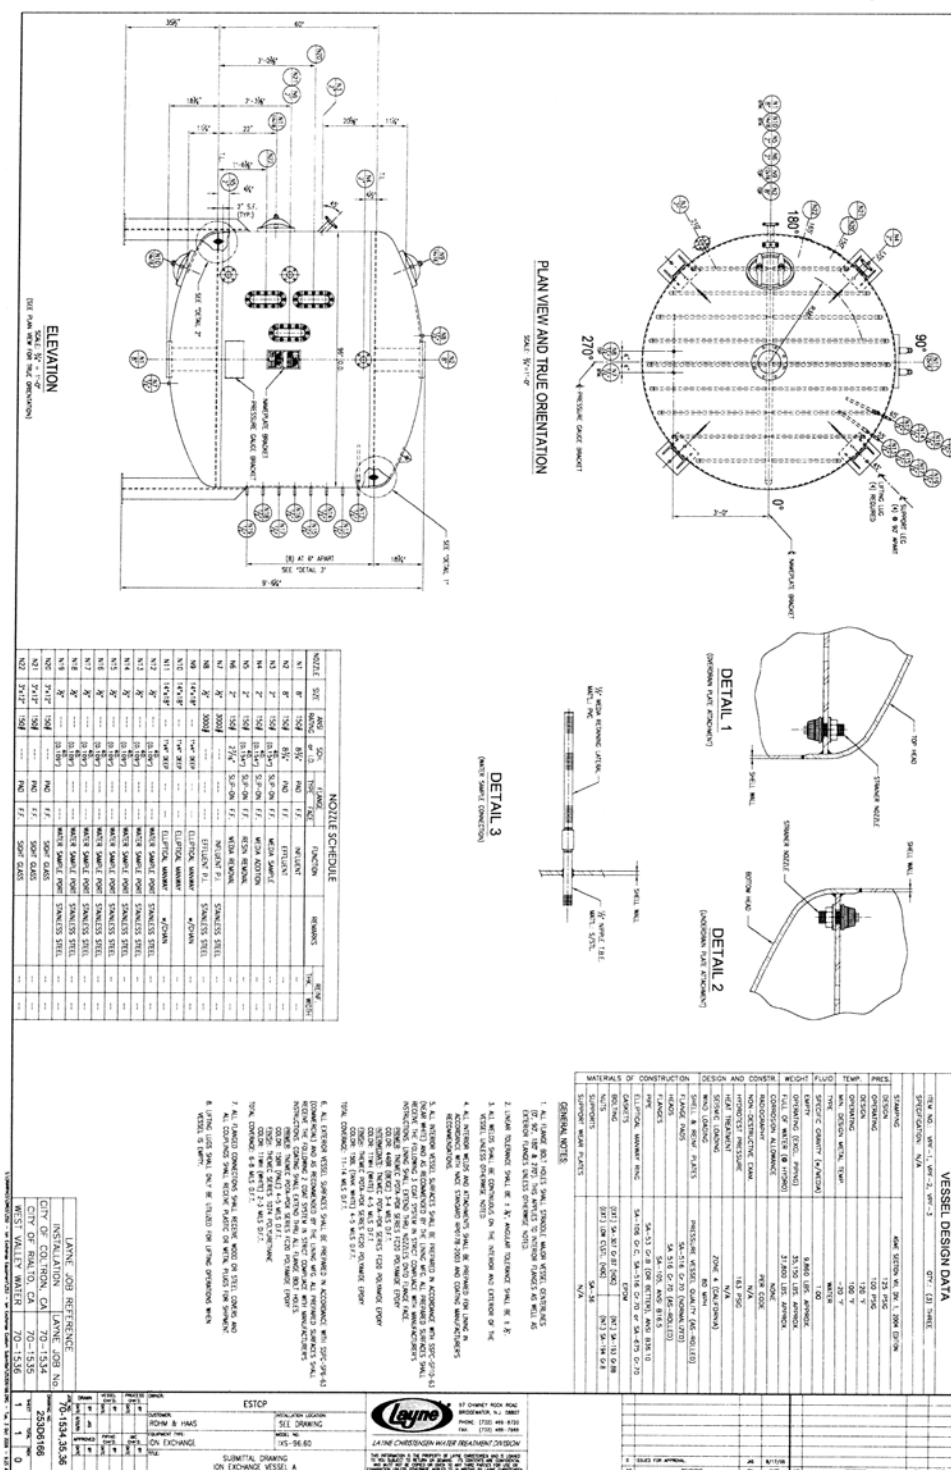

**Figure 6c.** Engineering drawing of ESTCP vessel skid, View #3



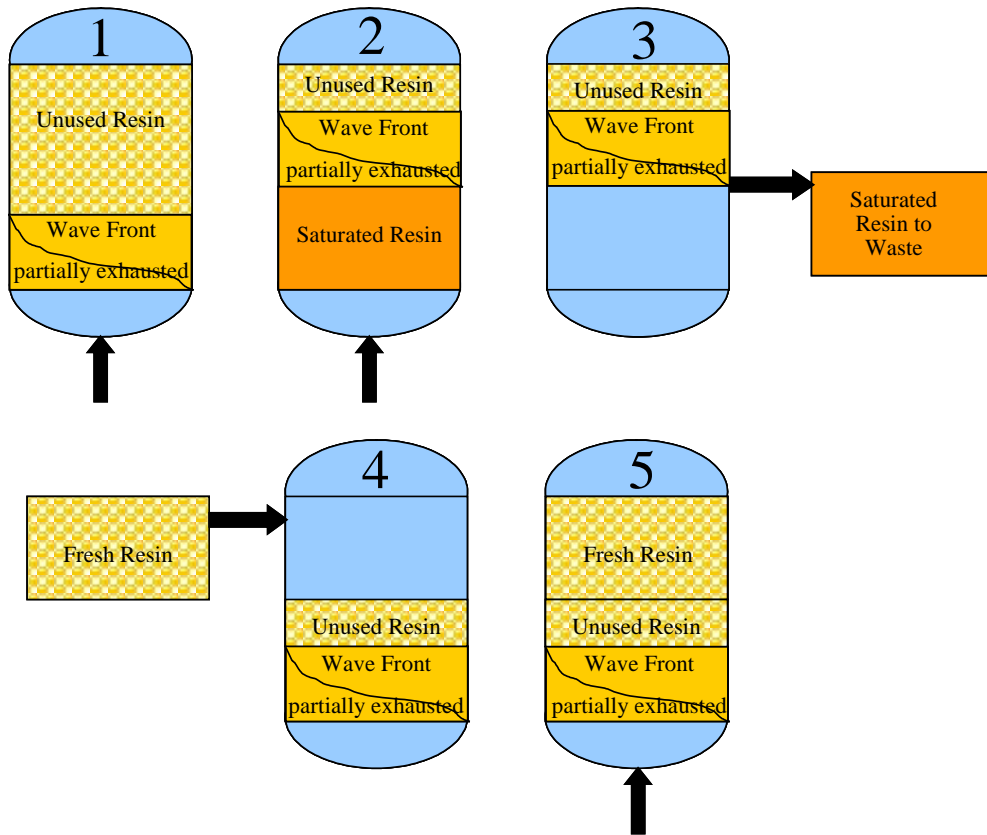

**Figure 7.** Resin exhaustion and replacement process for ESTCP demonstration project (up-flow water service).

In this application, the key design criteria are focused around the linear velocity of water through the ion exchange bed and the bed depth. The velocity needs to be sufficient to maintain the ion exchange bed in a packed state (against the upper nozzle plate) when running in the up-flow mode. For anion exchange resin of this type, this linear velocity is approximately 10 gpm/ft<sup>2</sup> of cross-sectional area. For an 8 ft diameter vessel (50 ft<sup>2</sup> cross-sectional area), this flow rate is about 500 gpm. If the linear velocity is too low, and fluidization of the ion exchange bed occurs, poor contact between the liquid and the beads could allow perchlorate ion to pass through the bed without being removed. Also, the rate at which perchlorate ions can migrate from the bulk liquid phase into the resin is partially dictated by the linear velocity of the water through the ion exchange bed. Higher flow rates are favorable for low concentrations of solute but shorten the time this solute is in contact with the ion exchange resin. Balancing these two variables typically results in a “mass transfer zone” which is the portion of the ion exchange bed through which the ion of interest is being removed from the water. It can be described by a linear distance over which the concentration of the ion of interest goes from the influent concentration to zero. As long as this mass transfer zone is shorter than the bed height, the ion exchange process can be employed. When the mass transfer zone is longer than the available resin bed, leakage of the unwanted ion out of the ion exchange bed will occur. It is easy to manage the velocity of water through the bed for a given flow rate by adjusting the diameter of the bed to give the desired velocity. One can then set the bed depth to manage the tradeoff between run length and pressure drop. Higher bed depths will give longer run lengths at the expense of higher pressure drops.

## 2.2 Technology Development

Amberlite<sup>TM</sup> PWA2 has been used commercially at the Lincoln Avenue Water Company and has been shown to be capable for removing perchlorate to below detection level. Results from a three-cubic foot (3-ft<sup>3</sup>) pilot program are discussed in a technical paper entitled, “Development of a Highly Selective Ion Exchange Resin for Removal of Perchlorate From Groundwater”.<sup>b</sup> In addition, this article describes the validation of a proprietary computer model as a predictive tool for resin performance.

Figure 8 shows four photographs from a 6 in diameter pilot column employing the proposed design. In this trial, a single nozzle was employed in the top and bottom of the column and a 1 in unscreened central lateral with ¼ in holes was installed. A 60 in bed depth of Amberlite<sup>TM</sup> PWA2 resin was added to the column. Water was introduced at a flow rate that equaled the proposed linear velocity of the full-scaled design. The bed was easily packed against the upper nozzle plate. Once the bed was packed, the valve on the central lateral was opened and the resin below the central lateral was removed through the holes in this lateral. When the resin level reached the central lateral, no more resin was removed from the vessel and the resin above this lateral remained in a well-packed state. Resin removal was completed within 3 minutes.



6" Pilot column  
before flow  
applied



Up- flow  
applied. Resin  
is packed  
against upper  
header plate.  
Mid-lateral can  
be seen on left.



Resin being  
removed  
through  
unscreened  
mid-lateral.



Resin transfer  
complete.  
Upper portion  
of bed still in  
packed state.  
Lower portion  
removed  
completely.

**Figure 8.** Pilot column employing proposed vessel design.

### 2.3 Advantages and Limitations of the Technology

The key factor affecting the cost of the system will be the management of the upper portion of the ion exchange bed during the removal of the lower exhausted portion. Removing unexhausted resin will result in higher resin use than anticipated and reduce the benefit of the design. There is also the obvious factor of resin capacity which has the major effect on the cost. This, however, has been well studied and the predictive model has been validated making this issue less of a risk and concern for the success of the demonstration.

Another factor affecting the overall cost performance equation is resin disposal. The used ion exchange media in this system as well as many other systems of similar design is disposed of in a properly approved facility (landfill or incineration). The cost of this disposal has not been prohibitive and has not detrimentally affected the economics of using ion exchange technology for perchlorate removal from drinking water sources.

Advantage: Compared to the lead-lag ion exchange process, the primary advantage of the technology being demonstrated is ion exchange resin utilization. While some lead-lag systems may allow full saturation of the lead bed, practical experience has shown that most lead beds are replaced for reasons other than perchlorate saturation, e.g. pressure drop due to compaction of suspended solids loading. The secondary advantage is the small foot-print for the water utility which allows deployment of this technology to locations in neighborhoods and locations with limited land.

Limitation: A limitation of the technology is more frequent resin change-outs. Also, most lead-lag systems employ large amounts of resin and the resin change-out procedures and infrastructure have been established to remove these large resin quantities. A more efficient method and infrastructure for smaller and more frequent resin change-outs will need to be established in the marketplace.

Advantage: Chromatographic peaking of perchlorate has not been an issue with ion exchange technology because most of the resins employed have a high selectivity for perchlorate. However, equilibrium leakage of perchlorate at quantities higher than the effluent specification can occur if the resin containing perchlorate is located near the exit of the vessel. In the case of lead-lag systems, the resin loading profile in the polishing vessel is not disturbed. Thus, the perchlorate inventory in the bed is not redistributed toward the exit and equilibrium leakage has not been an issue. With the proposed vessel design, some resin turbulence and mixing will occur when the upper portion of resin is allowed to fall into the bottom of the vessel after resin removal (from the bottom portion). During the 6" pilot column tests, it was observed that after the transfer of the lower portion of the ion exchange bed, the upper portion of the bed "fell" to the bottom over a period of a couple of minutes in a manner that mixed small portions of resin from the same general area of the bed, but did not create significant turn-over of the beds such that resin that was at the bottom of this portion of the bed ended up at the top. Thus, in general, the relative "order" of the resin was intact after it was allowed to "fall" into the bottom of the column. It is expected that this minor redistribution will not impact the overall resin utilization or the perchlorate leakage from the vessel.

Advantage: The other prominent technologies applied to perchlorate removal include biological treatment via fixed-, fluidized-, and membrane-bioreactors, and surfactant modified activated carbon (referred to as "tailored carbon"). As an overall technology, ion exchange is a very robust and predictive technology. It is governed by the laws of thermodynamics and kinetics and, thus, can be well modeled. Biological processes rely on the control of a live system and require addition of substrates to the water to keep the biological system active and healthy. Ion exchange has a long history of safe use in potable water treatment and results in little health risk to the public. Biological systems present the possibility for contamination of drinking water with undesirable microorganisms.

Advantage: While modified activated carbon has been shown to be effective, not enough is known about its long term performance, cost, and robustness to make an accurate comparison to ion exchange resin.

Advantage: Compared to other ion exchange based systems, the primary advantage of this technology is that it is designed to minimize the cost-per-unit of perchlorate removed. While capital cost and resin cost may be higher than other approaches, life-cost and unit cost should be lower. Additionally, the small foot print, low profile, and scalability make this an attractive alternative for wellhead treatment in residential areas or where space is limited or at a premium.

### 3 Performance Objectives

#### 3.1 Performance Objectives

The key performance objective for the demonstration is to offer lower perchlorate removal costs to water utilities and U.S. Government sites. This is achieved if perchlorate levels exiting the primary treatment vessel can be maintained below the stated target of 6 ppb and the resin utilization can be maximized. Thus perchlorate leakage and overall resin utilization are the key performance criteria for this demonstration and system design. This is governed by the ability to maintain the resin bed integrity with respect to perchlorate exhaustion profile, during periods of discontinuous operation (start/stop) and resin change-outs. It should be noted that this demonstration project examined resin utilization as it pertains to single-use/throw-away operation.

**Table 3-1. Performance Objectives**

Type of Performance Objective	Performance Criteria	Performance Metrics	Actual Performance
Quantitative	1. Meets drinking water standard for perchlorate	Perchlorate content out of primary vessel < 6 ppb, CA recommended regulatory level	Meets
	2. Utilizes resin capacity	Calculated and measure capacity utilization >/= predicted from computer model	Meets
	3. Effectively separates exhausted resin from fresh (polishing resin)	Measurement of calculated perchlorate mass versus measured perchlorate mass on resin removed from system	Adequate*
	4. Yields acceptable pressure drops	Pressure drop measured over course of demonstration <4 psig/ft.	Meets
	5. Ease-of-use / robust	System stays operational - >98% asset utilization.	Meets
Qualitative	6. Meets drinking water standard for organics	Does not impart organics to water as measured by state lab.	Meets/Exceeds
	7. Reduces treatment cost	Resin utilization and separation results in calculated treatment cost < current cost	Meets



	8. Recovers from suspended solids	Pressure drop decreases after resin change outs or down-flow flushes	Meets
	9. Breakthrough is measurable and predictable	Shape of the perchlorate breakthrough curve	Meets
	10. System can handle start/stop operation	Difference in throughput and stability of breakthrough curve under continuous vs frequent start/stop operation.	Meets

\*Adequate performance means resin separation and removal was achieved, however at this scale was more difficult than what was experienced in the pilot study.

#### 4 Facilities/Site Description

The test sites for this demonstration were selected by ESTCP. Each site has a high volume well (> 1000 gpm) on a ground water source that has shown persistent perchlorate contamination. Each city has perchlorate in the ground water at levels between 6-60 ppb. The recommended regulatory level for the state of California is 6 ppb.

The partial water analysis for each of the three demonstration site is listed in Table 3-2. Each of the sites represents drinking water wells that have been taken out of service due to perchlorate contamination or have had treatment added to allow for distribution and sale of the water. Figures 9, 10, and 11 show photographs of the West Valley Water District, City of Colton, and City of Rialto sites (respectively) where the demonstrations will take place.

**Table 4-1. Water Analyses for the ESTCP Demonstration sites**

<b>ESTCP - Demonstration Site Water Analyses</b>				
<b>Site</b>		<b>Rialto #4</b>	<b>WVWD #11</b>	<b>Colton #15&amp;17</b>
<b>Ion</b>	<b>Units</b>			
ClO <sub>4</sub> <sup>-</sup>	ppb	60-90	6	5
SO <sub>4</sub> <sup>2-</sup>	ppm	7	73	73
Cl <sup>-</sup>	ppm	4	14	14
NO <sub>3</sub> <sup>-</sup>	ppm	12	40	40
HCO <sub>3</sub> <sup>-</sup>	ppm as CaCO <sub>3</sub>	150	180	180

It should be noted that the nitrate levels for the waters at the West Valley Water District and the City of Colton sites are near the MCL. The perchlorate selective resin (Amberlite™ PWA2) being used for this demonstration also exhibits high selectivity for nitrate. Because perchlorate is the only significant ion to displace nitrate loaded on the resin and the perchlorate ion concentration is quite low, nitrate spiking, i.e. elution of nitrate at levels greater than the MCL) did not occur.

#### 4.1 Facility/Site Location and Operations

Only the City of Colton site has existing perchlorate removal treatment on the well. This is a conventional system as described previously. Current operating and cost data was not readily available.



**Figure 9.** West Valley Water District (WVWD) Well # 11.



**Figure 10.** City of Colton Dominick Reservoir and Wells #15 and #17 Treatment System.



**Figure 11.** City of Rialto, Well #4

## **5 Test Design**

### **5.1 Pre-Demonstration Testing and Analysis**

For each of the chosen sites, a computer simulation has been run to predict the throughput for each bed. The predictive model utilized is proprietary to the Dow Chemical Company and is not publically available. These data appear in Table 5-1. Resin capacity as measured by the total mass of perchlorate ion removed for each cycle (concentration x volume) will be measured against this prediction as a key performance criteria. It should be noted that the ion exchange resin being used in this demonstration project (Amberlite™ PWA2) has a very steep perchlorate equilibrium isotherm. This means that the perchlorate loading capacity of the resin ( $R-ClO_4$ ), to equilibrium saturation, increases sharply as the perchlorate content of the challenge water increases. This results in the resin having little sensitivity with respect to throughput (i.e. volume of water treated) based on varying amounts of perchlorate in the influent.

**Table 5-1. Perchlorate Loading Predictions for ESTCP Demonstration Sites**

<b>ESTCP - Perchlorate Loading Estimates</b>				
Loading Estimate		PWA2	PWA2	PWA2
To Full Equilibrium	Units	Rialto #4	WVWD #11	Colton #15&17
R-CIO <sub>4</sub> , eq/l	eq/l	0.092	0.013	0.013
Loading, lb/ft <sup>3</sup>	lb/ft <sup>3</sup>	0.570	0.083	0.083
Throughput, gal/ft <sup>3</sup>	gal/ft <sup>3</sup>	3,793,353	1,657,652	1,657,652

## 5.2 Operational Testing

### 5.2.1 Demonstration Set-Up and Start-Up

Site preparation – The perchlorate removal systems supplied for this demonstration are designed to be temporary, transportable and to minimize demonstration cost to ESTCP. For this reason, they are designed with minimal site preparation required and no automated instrumentation or control. Site preparation included:

- Preparing a graded crushed stone base on which to place the treatment skids
- Connection from the well pump and to the water distribution system
- Development of the ability to discharge water to the appropriate waste outlet for times when the wells must be run to clear suspended solids from the system

The treatment systems used mechanical flow meters so no electrical connections are necessary.

Equipment Mobilization and Installation - The vessels are skid mounted, each with its own frame as shown in Figure 6. Some face piping will be left off the system for shipping purposes. Each system was delivered by flat-bed truck and off-loaded by a small crane on site. Once off-loaded and sited, interconnecting piping was installed in the field and the system will be connected to the well feed pump and the drinking water distribution piping with manual shut-off valves used to isolate the system. No bypass is included because it is assumed these wells cannot be used for public consumption without treatment.






**Figure 12.** Face Piping and Well Connection – West Valley Water District


System Start-up (Shakedown) – Before operation began, all necessary CADHS permits were obtained by the participating utilities. Once installed, the well pumps were run to drain until the water runs clear of any visible suspended solids. The vessels were then filled with water to leak test the piping. When the piping and valves were leak tested and tightened as necessary, one-half of the water was drained from the system and new ion exchange resin was loaded into the vessels using the custom resin loading system shown in Figure 13. When the proper amount of resin was loaded in each vessel, a 20-bed volume (of resin installed) rinse of the resin was conducted in accordance with National Sanitation Foundation (NSF) protocols for Amberlite™ PWA2, perchlorate selective ion exchange resin.

#### 5.2.2 Period of Operation

An anticipated program timeline is presented in the Gantt chart in Figure 14. This schedule applied to all three sites, depending when each water purveyor obtained a CADHS permit to distribute this water for sale.

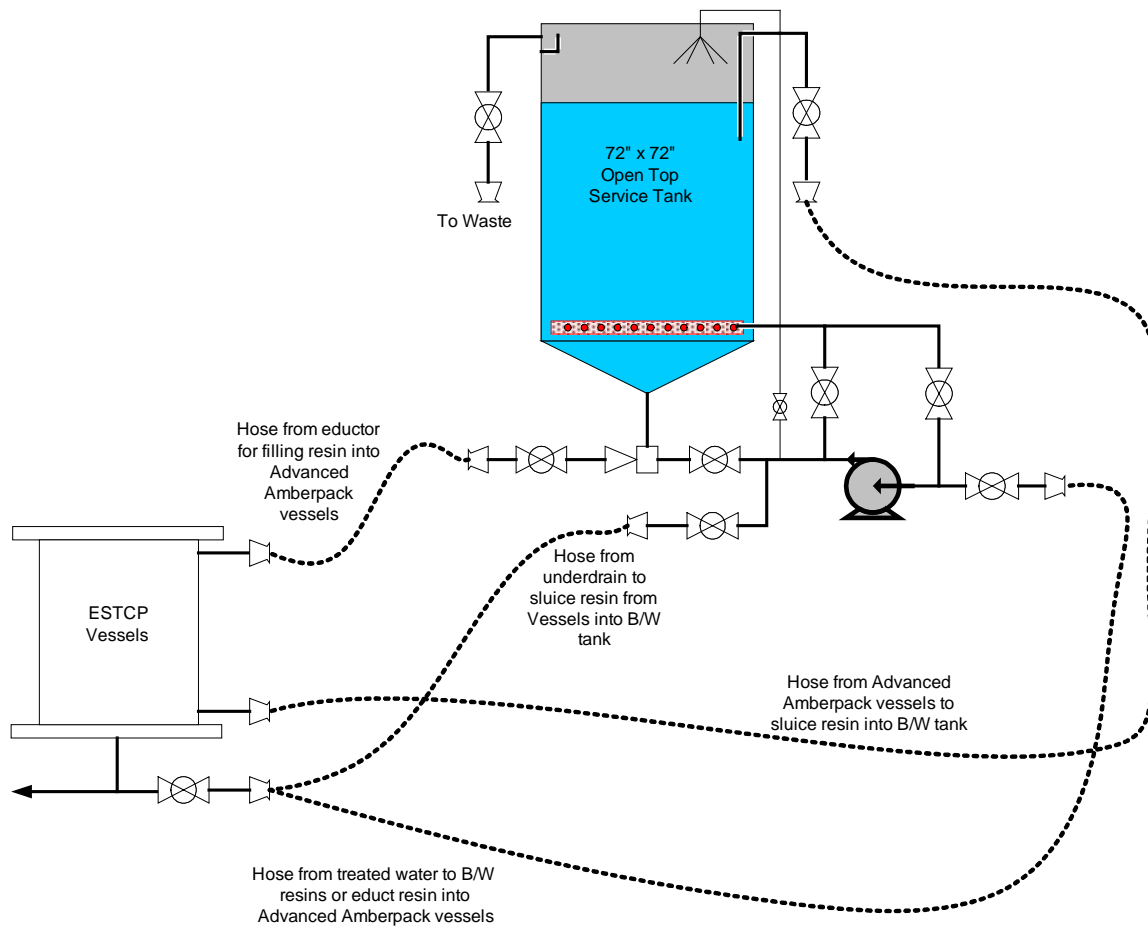

**Figure 13.** Process Flow Diagram for ESTCP Resin Loading and Service Vessel.

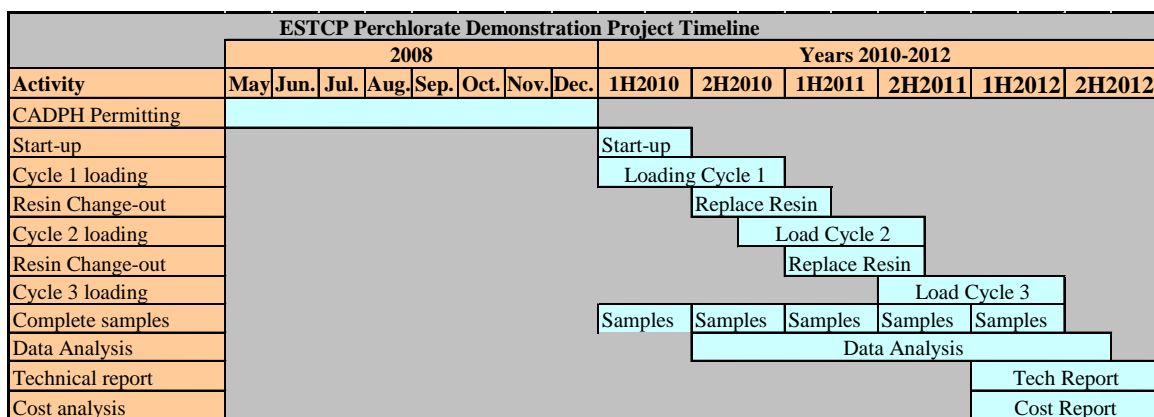

**Figure 14.** Time Line for ESTCP Demonstration Project.

### 5.2.3 Treatment Rate

The systems are designed to treat 1250 gpm of ground water. Higher flow rates can be achieved but at the expense of pressure drop. A lower limit on flow rate is estimated to be 500 gpm. Below this flow rate, the risk of fluidizing the bed becomes an issue.

### 5.2.4 Residuals Handling

There are two expected residuals from this demonstration: water and used ion exchange resin. Water that is used for rinsing new resin, slurring resin into or out of the vessels, or run to clear due to suspended solids must be disposed of in a manner which is approved by the state of California and the local regulations. This water was sent to nearby drains or retention basins. Spent ion exchange resin that is loaded with perchlorate was disposed of by incineration under a service contract with Siemens Industries Inc. Both are consistent with currently performed best practices and are acceptable to both state and local authorities.

### 5.2.5 Operating Parameters for the Technology

They key operating parameters are flow rate and volume treated. These parameters were measured via a mechanical flow meter with data manually recorded periodically. While there is no upper limit on the flow rate from a perchlorate removal stand point, the upper limit was bounded by the capability of the well pump and the pressure drop across the system. Flow rates below 500 gpm were avoided because these may result in fluidization of the ion exchange bed which could allow perchlorate to escape the primary demonstration vessel.

The system is designed to operate continuously, but it can accept periodic shutdowns. Because of its simplicity, the system is basically either “on” or “off” which is defined by when the well pump is running. No “operation” per se is required. However, those involved with producing water from these wells were educated on the process, the program, and given a set of emergency instructions and contacts should the system need to be taken out of service for any reason.

There is little that is required between resin change-outs under normal operation. Water samples were taken on at least a weekly basis and measured for perchlorate content. In this manner, the rate at which the resin is exhausting can be monitored and resin change outs scheduled appropriately. The perchlorate concentrations and the volume of water treated will be used to calculate the mass of perchlorate removed by the system and, thus, the economics of the process.

#### 5.2.6 Experimental Design

This program is designed as a demonstration of a system design and operation at full-scale. As such, the operating parameters will not be varied significantly to determine system response to variables and operating ranges. The program will:

- Define the perchlorate exhaustion profile for a packed bed of ion exchange resin
- Demonstrate that a defined and fixed portion of that bed can be controllably removed
- Show that a new exhaustion profile can be reestablished by the addition of fresh resin.

In this manner, the lead-lag aspects of the traditional two vessel approach can be accomplished in one low profile vessel. This will be repeated for three partial exhaustion cycles.

The perchlorate exhaustion profile was established based on multiple water samples taken along the height of the ion exchange bed. In this case, the sampling taps are located every 6 in. up the straight side of the vessel as well as on the inlet and outlet of the primary and polishing vessels. These sampling taps extend 12 inches into the resin bed to assist in getting a representative sample. The sampling procedure is described in Appendix D. By measuring the perchlorate content of this water as a function location (height) in the bed and as a function of throughput, the shape of the exhaustion profile (mass transfer zone) was determined and its progress through the ion exchange bed could be monitored. A computer simulation program was used to estimate when the resin will become exhausted. These results appear in Table 5-1, expressed as lbs  $\text{ClO}_4^-$  /  $\text{ft}^3$  of resin to complete exhaustion and converted to throughput (gallons) per  $\text{ft}^3$  of resin based on the concentration of perchlorate in the water. In the case of the West Valley Water District site, this number is 1,657,652 gal/ $\text{ft}^3$ . The objective was to exhaust and remove 100  $\text{ft}^3$  of resin per cycle. We will target getting 11 water sample sets during this time period. Thus water sampling will occur every 15,000,000 gallon or approximately every 8 days during the first cycle assuming that the system is continuously operated at the design flow rate of 1250 gpm. The first cycle is expected to last approximately 90 days.

$$\frac{100 \text{ ft}^3 \text{ resin}}{\text{ft}^3 \text{ resin}} \times \frac{1,657,652 \text{ gallons}}{\text{ft}^3 \text{ resin}} \times \frac{1}{11 \text{ sample sets}} = \frac{15,069,563 \text{ gal}}{\text{sample set}}$$

$$\frac{15,069,563 \text{ gallons}}{\text{Sample set}} \times \frac{\text{minutes}}{1250 \text{ gal}} \times \frac{\text{hr}}{60 \text{ min}} \times \frac{\text{day}}{24 \text{ hr}} = \frac{8.37 \text{ days}}{\text{sample set}}$$



The mass of perchlorate removed by this 100 ft<sup>3</sup> of resin is calculated from the difference in perchlorate concentration between the inlet and the sample tap corresponding to the 100 ft<sup>3</sup> of resin employed over the loading cycle, multiplied by the total treatment volume. During resin change outs, a composite sample of the exhausted resin may be taken. This material will be stripped of perchlorate in the laboratory and the mass of perchlorate recovered will be compared to the calculated mass of perchlorate removed as a way to verify the mass balance for perchlorate.

The ability for the system to handle multiple starts and stops was monitored by recording each time the system was started and stopped and relating the corresponding water sampling data to each event to determine if the perchlorate loading zone is being disturbed during these start-stop events. An elongated mass transfer zone, compared to initial results, is a sign that resin is getting redistributed in the system during start-stop operation. If the system should be run on a steady basis for the first two resin loads, a forced start-stop period will be conducted and the results observed and recorded.

The ability for the system to handle minor suspended solids load was determined by the pressure drop across the system during each of the loading cycles. There was also be an opportunity to visually observe the lower portion of the resin bed during the resin transfer/replenishment operations.

#### 5.2.7 Performance Monitoring

**Data Collection:** The primary data will be perchlorate content of the water at all points in the system and the volume of water treated for these corresponding samples. These data was generated from analysis of water samples taken on a regular basis from multiple points in the system. A mechanical flow meter on the inlet to the system will display the instantaneous flow rate and measure volumetric throughput. The date, time, instantaneous flow rate, and throughput was recorded on a daily basis by Utility personnel. Figure 15 shows an example data collection sheet for this information. P1 is the inlet pressure to the system. P2 refers to the intermediate pressure between the demonstration and safety polishing vessels. P3 corresponds to the outlet of the safety polishing vessel. At approximately 11 evenly spaced intervals throughout each cycle, water samples were collected from all sample ports and sent to the laboratory for perchlorate analysis. Some samples were tested for other common and interfering ions such as nitrate and sulfate. Figures 5a and 5b (page 7 above) shows the schematic drawing of the treatment system and the location of the sample points. The timing of these samples will be determined by the computer model predictions for run length (throughput) and amended, as needed, by field data and experience as the program proceeds. Water samples were obtained by plant operators into 125 ml polyethylene sample bottles and sealed. As perchlorate and the other common inorganic salts are very stable, no special preservatives or handling procedures were required for these samples. In addition to the samples taken for the demonstration program, routine samples required by the state of California to distribute this drinking water were taken by the water utility and submitted to a state

approved laboratory in accordance with USEPA, CADHS, and any other local regulatory requirements.

[illegible]

**Figure 15.** Example Daily Log Sheet for ESTCP Demonstration Program.

**Experimental Controls:** The primary baseline data is the inlet water analysis and the outlet water quality at the initial time ( $t=0$ ). Inlet water samples will also be taken with each sample set. This is not a side-by-side comparison study to other technologies or other configurations of ion exchange resin. Thus, comparisons for performance and cost must come from independent sites and independent tests. One of the test sites (City of Colton) has an operating perchlorate removal system using ion exchange resin with the traditional carbon vessel configuration. This should provide a good opportunity to compare the demonstration unit with a conventional unit for size, performance, and cost. Available data will be gathered from the utility and used as baseline data for competing technologies.

**Analytical/Testing Methods:** Analytical/Testing Methods are described in detail in Appendix A.

**Ion Exchange Resins:** The ion exchange resins, used in this demonstration project, will come from commercial stock. As such it will be manufactured and tested using standard Rohm and Haas Company Quality Control and Quality Assurance methods and practices. The lot number for each batch of ion exchange resin employed will be recorded in the site log book and be recorded in the electronic file belonging to the Principal Investigator.

**5.3 Demobilization**

As per the ESTCP contract, the systems used in this demonstration program will be left in place and turned over to the water utilities to use as they see fit.

**5.4 Quality Assurance / Quality Control**

The Quality Assurance Project Plan is described, in detail, in Appendix B.

**5.5 Health and Safety Assurance Plan (HASP)**

Appendix C describes the Health and Safety Plan.

**5.6 Management and Staffing**

Table 5-4 shows the roles and responsibilities of the primary participants in this demonstration project.

**Table 5-2. Management and Staffing for ESTCP Demonstration Project.**

Name	Organization	Role	Responsibility
Jim Summerfield	Dow Chemical	Principal Investigator	Coordinate all efforts to conduct demonstration. Conduct performance and cost analyses. Write reports and documentation.
Dr. Scott Boyce	Dow Chemical	ESTCP Liaison	Ensure all obligations to ESTCP are being met. Primary communications with ESTCP.
Jay Miers	Dow Chemical	Principal Investigator	Conduct performance and cost analyses. Assist in documentation.
Chris Savino	Layne Christensen Co.	Engineering Manager	Lead effort to engineer and fabricate physical equipment.
Cathy Swanson	Siemens Industries	Resin Replacement and disposal Services	Manage services to install and start-up equipment, change-out resins, and resin disposal.
Teresa Fonseca	Clinical Labs of San Bernardino	Analytical Services	Laboratory analysis of perchlorate in water samples from each site.
Tom Crowley	West Valley Water District	Host Utility Manager	Coordinate site issues and maintain responsibility for distributed water.
Mike Cory	City of Colton	Host Utility Manager	Coordinate site issues and maintain responsibility for distributed water.
Peter Fox	City of Rialto	Host Utility Manager	Coordinate site issues and maintain responsibility for distributed water.

## 5.7 Demonstration Schedule

Figure 14 (on page 23 above) depicts a Gantt chart of the expected schedule for this demonstration.

## 6 Performance Assessment

### 6.1 Performance Criteria

Table 6-1 describes, in detail, the performance used to evaluate the performance of the perchlorate treatment technology in this demonstration project. “Primary” criteria directly address the project’s performance objectives.

**Table 6-1: Performance Criteria for ESTCP Demonstration Project.**

Performance Criteria	Description	Primary or Secondary
Contaminant reduction	The system must achieve perchlorate effluent below the CA proposed limit of 6 ppb from primary vessel. Target is <1.0 ppb	Primary
Resin Separation	System must be able to effectively separate exhausted resin from unexhausted resin.	Primary
Resin Utilization	Primary vessel should maximize the use of the ion exchange resin. The target is >95% utilization of exchange capacity.	Primary
Cost	The total CAPEX and OPEX must be below current market prices to be successful/valuable.	Primary
Breakthrough Predictability	Demonstrate the ability to monitor the location and rate of change of the perchlorate breakthrough front (mass transfer zone).	Secondary
Ease-of-Use	The partial replacement of ion exchange resin must be fast, effective, simple and reliable.	Secondary
Robust process	The system must be able to handle frequent start-stop events without resulting in premature breakthrough.	Primary
Solids Handling	It will be beneficial if the system can tolerate some suspended solids loading as this makes the process robust and reduces pretreatment requirements.	Secondary
Overall ease and robustness	The overall ease of ownership should be high. This is based on installation, start-up, operation, and change-out.	Secondary

## 6.2 Performance Confirmation Methods

Table 6-2 discusses the performance criteria, metrics and methods utilized to evaluate the demonstration.

**Table 6-2. Expected Performance and Performance Confirmation Methods**

Performance Criteria	Expected Performance Metric (pre-Demonstration)	Performance Confirmation Method
Contaminant Reduction	Reduce $\text{ClO}_4^-$ to below 1 ppb from primary vessel	Measure $\text{ClO}_4^-$ in effluent by ion chromatography (method described in Appendix A)
Resin Separation	Will remove >95% of fully exhausted resin (below mid-lateral) and retain >95% of the unexhausted resin (above the mid-lateral).	1) Mass balance on $\text{ClO}_4^-$ during each cycle using ion chromatography and resin elution technique. 2) Measuring volume of resin removed. 3) Measure initial $\text{ClO}_4^-$ distribution and mass transfer zone upon restart after resin replacement.
Resin Utilization	Will utilize >95% of the applied ion exchange capacity	1) Mass balance of $\text{ClO}_4^-$ over each cycle using ion Chromatography. 2) Direct measure of $\text{ClO}_4^-$ eluted from exhausted resin.
Cost	Calculated costs based on CAPEX quotation(s) and demonstrated OPEX will be lower than current contract costs for $\text{ClO}_4^-$ removal.	Detailed cost calculations based on demonstration project data.
Robust Process	The process will tolerate start-stop operation without decrease in resin utilization and premature perchlorate breakthrough.	Position and shape of perchlorate breakthrough curve (mass transfer zone) will be monitored as a function of frequency and timing of start-stop intervals. Same methods as used for "Resin Utilization"
Breakthrough Predictability	A clear and predictable perchlorate breakthrough curve (mass transfer zone) will be able to be identified and mapped in the ion exchange bed as a function of run time and perchlorate flux (mass loading in $\mu\text{g}/\text{liter}$ )	The data generated to determine resin utilization will be plotted to define perchlorate breakthrough curve (mass transfer zone) through each loading cycle.
<b>Continued on next page.</b>		

<b>Table 6-2 continued.</b>		
Performance Criteria	Expected Performance Metric (pre-Demonstration)	Performance Confirmation Method
Ease-of-use	The system will be easy to load, easy to operate, and easy to change resins with no special operator attention or expertise.	An operator log will be kept to record any excursions in operations and detailed notes and photos will be taken during resin change outs to characterize and record the ease-of-operation/use.
Solids Handling Capability	The system will be able to handle a small amount of suspended solids without significant disruption to service.	Suspended solids will be measured on the incoming water during each cycle and the pressure drop across the system will be observed, recorded, and monitored during these loading cycles.


### 6.3 Data Analysis, Interpretation and Evaluation

The critical data are the concentration of perchlorate in equilibrium with each fraction of ion exchange resin along the height of the bed, including the effluent. These data come directly from the measurement of perchlorate in the water samples taken at intervals throughout each cycle at specified volumetric throughputs. The perchlorate concentration is plotted as a function of bed height and volume throughput for each set of samples. In this manner, a “graphical picture” of the shape and progression of the exhaustion wave front (mass transfer zone) can be attained. From this picture, the resin utilization is determined and also ascertains the impact of any process upsets such as frequent start-stop operation. The redistribution of perchlorate containing resin after each resin transfer can also be seen in this manner. This redistribution and the total mass of perchlorate eluted from the resin removed from the system will enable a mass balance on perchlorate to be obtained and, hence, the efficiency of the vessel design toward resin management.


### 6.4 West Valley Water District – Performance Data

West Valley Water District Well #11 system demonstration occurred from January 11, 2010 thru May 10, 2011. No significant operational issues prevented timely completion of this demonstration and with great support from West Valley Water employees during the demonstration period, all operations were monitored very closely. Resin compaction did result in limited ability to remove the resin required between cycles and disrupted the natural chromatographic distribution of perchlorate loading on the media. There is no doubt that this affected the unit from operating optimally, however the data would suggest that the unit did perform adequately. The data from the 3 performance cycles at West Valley Water District are shown below in Figures 16, 17 and 18. These data show the perchlorate concentration in the lead bed at various points along the straight side of the vessel at 6” increments versus the


volumetric throughput in millions of gallons (MG) and the date the sample were taken.

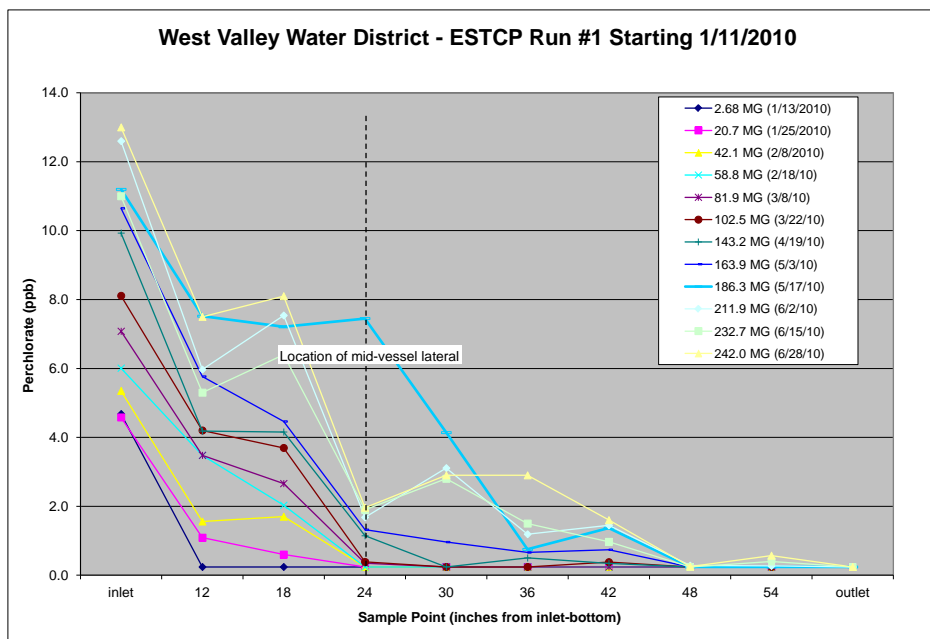

**Figure 16.** West Valley Water District, Cycle #1

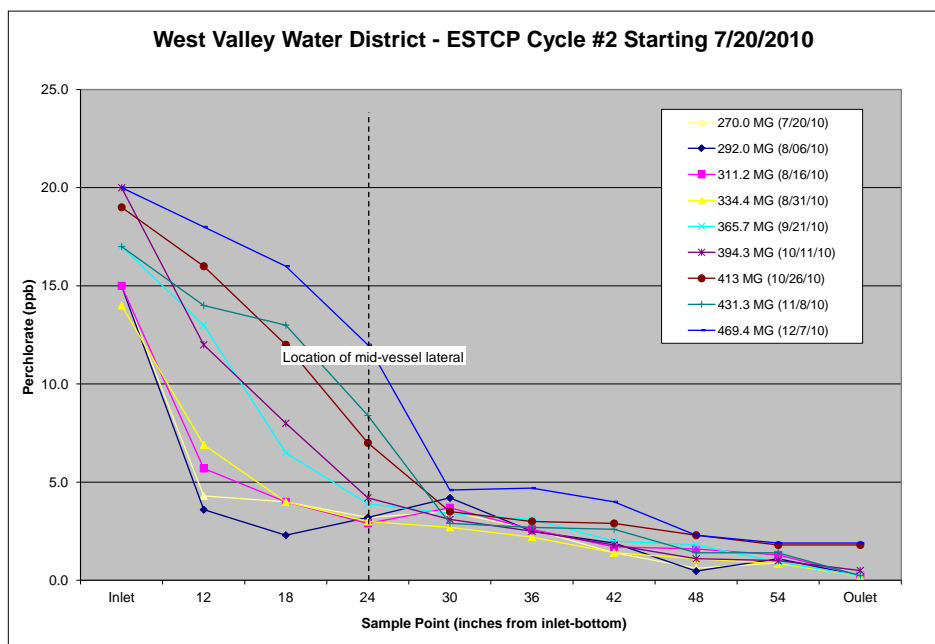

**Figure 17.** West Valley Water District, Cycle #2

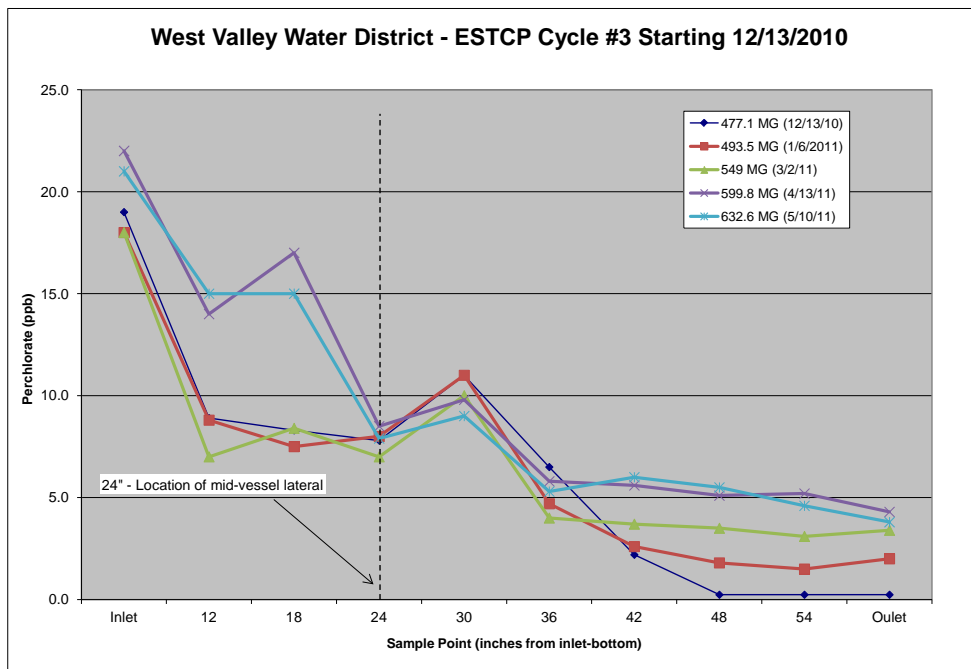


**Figure 18.** West Valley Water District, Cycle #3


### 6.5 City of Colton – Performance Data

The City of Colton demonstration at Wells #15 and #17 encountered flow balancing issues after the first cycle of operation. The demonstration unit is tied into the feed header of an existing perchlorate removal system and due to normal hydraulic balancing, the demonstration unit regularly was starved of water. Other issues during the demonstration period including broken nozzles, plugged nozzles and compacted resin and well pump issues, resulted in sporadic operation and data acquisition. The data below covers 2 cycles of operation from July 26, 2010 to March 19, 2012. Due to limited achievable flow of water to the demonstration unit, a 3<sup>rd</sup> cycle of operation has been delayed indefinitely. The performance data are shown in Figures 19 and 20.



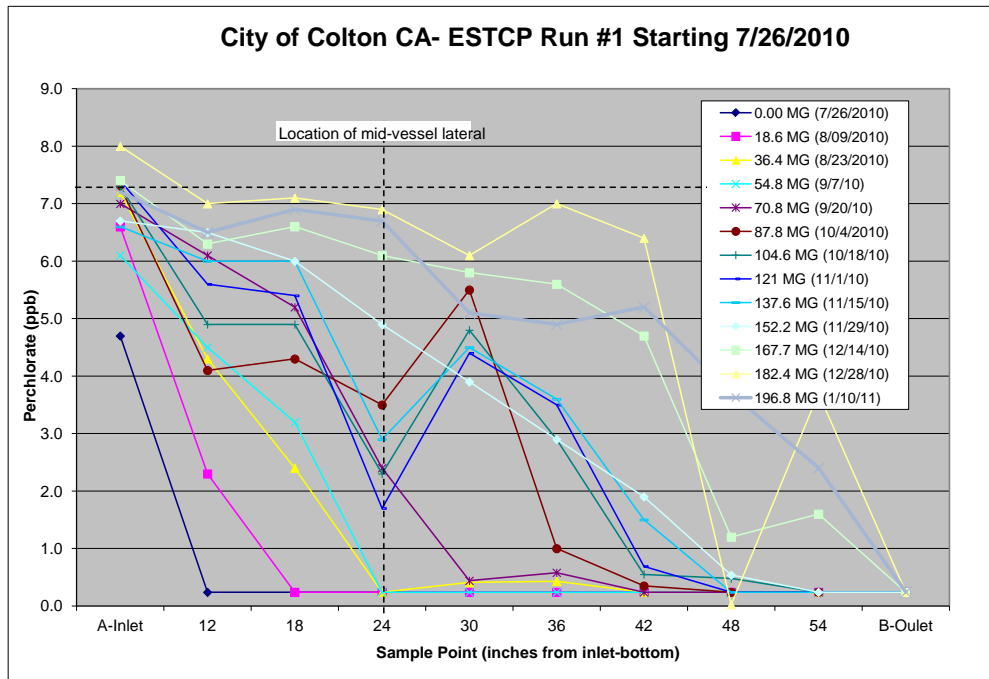


**Figure 19.** City of Colton, Cycle #1

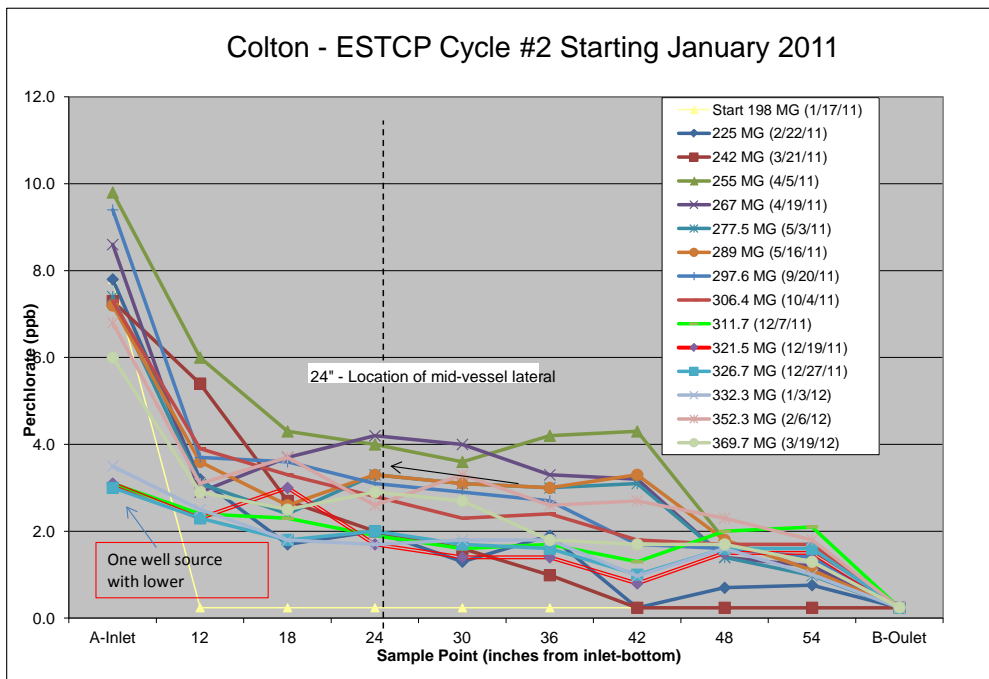

**Figure 20.** City of Colton, Cycle #2

## 6.6 City of Rialto – Performance Data

City of Rialto Well #4 demonstration site encountered multiple operational setbacks during the proposed operational period. There was in a water rights dispute with neighboring municipalities, plus the demonstration unit was not permitted for producing potable water. All water produced during operation was discharged to a low-lying retention pond adjacent to the well site and was not conducive to significant in-service operations. Due to these circumstances, the operation of the unit and data collected was sporadic at best. Below are the data for this site, shown in Figure 21.

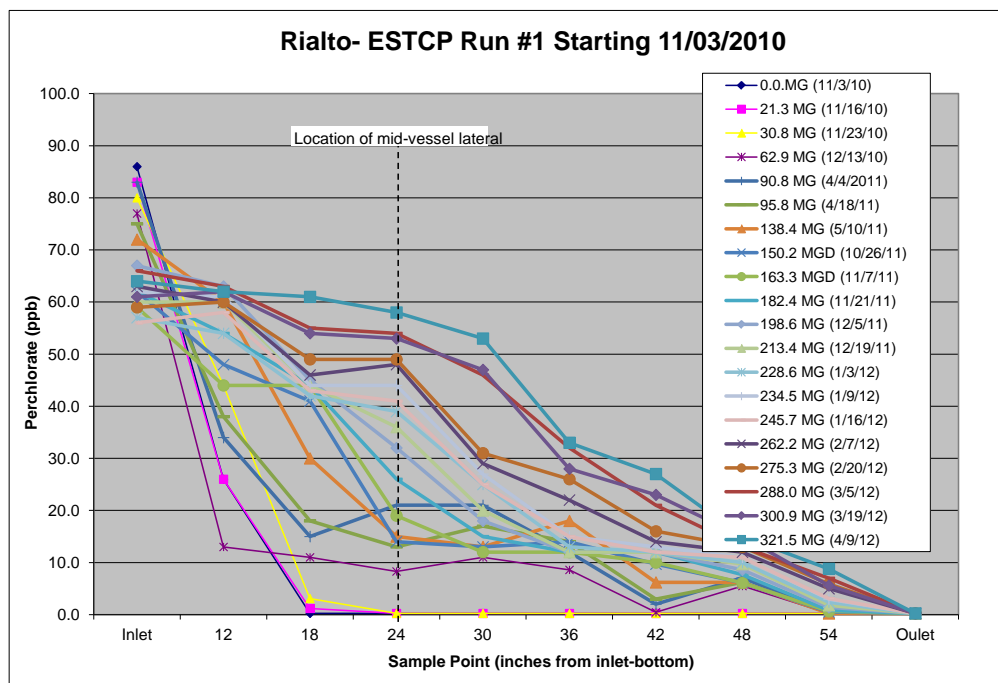

**Figure 21.** City of Rialto, Cycle #1

## 7 Cost Assessment

### 7.1 Cost Reporting

Cost reporting will be as per the Table 7-1.

**Table 7-1. Cost Tracking**

Cost Category	Sub-Category	Details	Unit	Unit price	Usage	Total cost
Capital Costs	Capital equipment					\$435,000
	Site works					\$370,000
	Installation	Man-power	Man-hours			
		Supplies				
		Rentals				
Start-up Costs	Man-power	Man power	Man-hours	\$250	80	\$20,000
	Other services	Disinfection Biological testing				\$2,000
Operating cost	Water Sampling	See below	Man-hours			
	Supplies	Bottle				\$1,000
	Other services	Repairs/ upgrades				\$329,000
Resin Costs	Initial fill	resin	ft3	\$325	978	\$317,850
	1st Change out	resin	ft3	\$325	200	\$65,000
	2nd Change out	resin	ft3	\$325	100	\$32,500
Resin Changes	Man-power	Man-power	Man-hours	\$250	48	\$12,000
	Other services					
	Disposal Cost	resin	ft3	\$100	820	\$82,000
Analytical	Water Samples	each	No. Samples			\$32,000
	Resin Samples		No. Samples			\$0
	Reg. Samples		No. Samples			\$0

### 7.2 Cost Analysis

**Cost Comparison:** In the concentration range of interest (roughly 4-200 ppb  $\text{ClO}_4^-$ ), the only commercially applied technology is ion exchange. All these systems use the standard carbon vessel design which we believe is inefficient in resin utilization.

**Cost Basis:** The primary cost comparison will be based on the combination of capital cost, resin utilization, resin exchange and disposal costs. Where possible, we will extract these costs from commercial systems and contracts. Many perchlorate removal systems are operated on a service basis where the water utility pays on a volume-treated basis with some baseline costs. We will compare actual and projected costs, based on the demonstration, to existing contract costs.

**Cost Drivers:** As the perchlorate selective resin to be used in this Demonstration project (Amberlite™ PWA2) is relatively insensitive to perchlorate concentration with respect to resin utilization, the primary cost drivers are expected to be the impacts of abnormal operations on resin utilization. These will include frequent on-

off cycling of the system and suspended solids in the feed water. The latter should be considered a separate contaminant issue. Pressure drop will also have an impact on cost. Deeper beds will result in more pressure drop and, thus, more energy usage to pump the water. However, deeper beds will also decrease the frequency of resin replacements, saving on man-power and service fees.

**Life Cycle Cost:** As this is a full scale demonstration over a significant period of time, determining life cycle costs will be a straight forward exercise. The capital cost will be amortized over a 10 year period and the operating costs will be directly proportional to the costs from the demonstration project.

## **8 Implementation Issues**

### **8.1 Environmental Checklist**

**California Department of Health Services (CADHS) Permit:** As the water produced from this demonstration project will be placed into the municipal distribution system, each participating utility must obtain a permit from the CADHS. This will include issues outside the scope of this program, such as other contaminants, disinfection practices, and analytical responsibilities. Rohm and Haas Company will not be distributing this water and therefore cannot be the holder of these permits.

As mandated by the National Sanitation Foundation (NSF) certification for Amberlite<sup>TM</sup> PWA2, the resin used in this demonstration must be rinsed for 20 Bed Volumes (BV = volume of resin installed in the vessel) before this water can be distributed for human consumption. This initial rinse of water will need to be discharged. It will be the responsibility of the participating Utilities to obtain the necessary permits.

### **8.2 Other Regulatory Issues**

As Principal Investigator, I have met once with CADHS in person and once by teleconference to discuss this design, system, and program. We will need to have a joint meeting with each participating Utility and the local CADHS office to finalize permitting requirements and plans.

### **8.3 End-User Issues**

As Principal Investigator, I have met with the managers of each of the participating utilities. In general they are cooperative and excited about participating in this program and specific demonstration project. The biggest interest is in the potential to attain the anticipated high rate of perchlorate removal in a small foot-print and low profile unit. The biggest concern among each of the utilities is the CADHS permitting issues. The long term decisions to expand use of this vessel design and concept will be based on a successful demonstration that a stable, controllable and predictable process is achievable in a single vessel as determined by CADHS.

**Procurement Issues:** While 8 ft. diameter pressure vessels are common industrial items, they are rarely kept in inventory. While all of the elements of the design of our

vessels have been practiced before, they have not been combined into one vessel design as we are using them. Thus we are considering this program to use a modification of commercially-available, off-the-shelf, items. As with all lined, pressure vessels of size, these items are made-to-order items and thus require up to 16 week lead time. Once demonstrated, this vessel design can be fabricated by existing vessel manufacturers and a supply infrastructure for end users already exists.

**Custom Service Vessel:** A custom service vessel is being designed for use in the resin transfer operations. This will make the resin transfers easy and enable them to be completed without liquid discharges. This tank will be built and owned by the service company conducting the resin change outs (Layne Christensen) but the design can be offered to the participating Utilities if they should wish to buy or build such a service vessel for their own use after this program. This service vessel will be skid mounted and mobile.

**Transfer of Assets –** The assets (tanks and resin) from this demonstration project will be transferred to the Utilities at the end of this program. These units have been designed as fully manual units to keep demonstration costs to ESTCP down and the units may not be in a readily usable form when transferred. These units should be retrofitted with some remotely-actuated valves and minimal instrumentation to allow remote monitoring and operation of the systems. Additionally, in order to be able to obtain a CADHS permit, a polishing vessel is being provided as a safety/back-up system in the event of unexpected early breakthrough of perchlorate. This vessel will have little utility if this program proves to be successful. It is slightly more costly, but it may be more prudent to employ two of the modified vessels. They can be separated into two fully functional systems once the demonstration program has been deemed successful.

## **9 References**

- a. Committee to Assess the Health Implications of Perchlorate Ingestion, National Research Council, “Health Implications of Perchlorate Ingestion”, ISBN 0309095689.
- b. Carlin, Hoffman, Mallmann, and Peschman, 2004, “Development of a Highly Selective Ion Exchange Resin for Removal of Perchlorate From Groundwater”, paper presented at the 2004 National Ground Water Association symposium on Perchlorate.

## 10 Points of Contact

**Table 10-1. Points of Contact for ESTCP Demonstration Project.**

Point of Contact	Organization Address	Phone Email	Role in Project
Jim Summerfield	Dow Water and Process Solutions 5065 State Street. #255 Saginaw, MI 48603	989-781-0306 jmsummerfield@dow.co	Principal Investigator
Jay A. Miers	Dow Water and Process Solutions 100 Independence Mall West Philadelphia, PA 19106	989-638-2241 JMiers@dow.com	Principal Investigator
Scott D. Boyce	Dow Chemical 727 Norristown Rd. Spring House, PA 19477	215-641-7518 sboyce@dow.com	ESTCP Liaison
Chris Savino	Layne Christensen 97 Chimney Pond Rd Bridgewater, NJ 08807	732-469-8720 csavino@layne christensen.com	
Mike Cory	City of Colton 160 S. 10 <sup>th</sup> St. Colton, CA 92324	909-370-6101 mcory@ci.colton.ca.us	
Tom Crowley	West Valley Water District 855 W. Baseline Rd. Rialto, CA 92376	909-875-1804 tcrowley@wvwd.org	
Peter Fox	City of Rialto 150 S. Palm Rd. Rialto, CA 92376	909-421-7244 <a href="mailto:pfox@rialtoca.gov">pfox@rialtoca.gov</a>	

## 11 Conclusions

- West Valley Water District achieved the required <6 ppb perchlorate in the treated water over the entire 3 cycles of operation
- City of Colton achieved the required <6 ppb perchlorate in the treated water over 2 cycles of operation
- City of Rialto achieved the required <6 ppb perchlorate in the treated water during 1 cycle of operation
- Cycle throughput ranged from 200-320 MM gallon (~6 months) and was not directly correlated to influent perchlorate concentration
- Resin compaction during the cycle time compromised resin removal from the subsurface lateral and disturbed the natural chromatographic profile of the resin bed
- Overall performances of each the unit were compromised by resin compaction and effective removal, but the economic benefit was not lost.
- Capital costs and site preparation are quite low and very affordable at approximately \$275,000 per unit. Additional costs are likely based on individual site requirements
- Conservative annual operating cost are estimated as follows:
  - 5 month cycle = 2.4 cycles per year
  - 100 CF of resin per cycle
    - $100 \text{ CF} \times 2.4 \text{ cycles} \times \$190/\text{CF} = \$45,600$
  - Resin removal and disposal = \$13,000/cycle
    - $\$13,000 \times 2.4 \text{ cycles} = \$31,200$
  - **Total annual operating cost = \$76,800 (\$45,600+\$31,200)**
  - Estimate every 3 years replacing all media (lead and lag vessels) =
    - $326 \text{ CF} \times \$190/\text{CF} = \$61,940$
    - $326 \text{ CF} \times \$100/\text{CF} = \$32,600$  (disposal cost)
    - Resin removal and installation = \$15,000
    - Total = \$109,540
- Critical learnings:
  - All 3 sites produced water below 6 ppb perchlorate during the entire demonstration time
  - Minute amounts of suspended solids in the feed water will accumulate resulting in a significant mass during 6 months of operation
  - Resin compaction observed at all 3 demonstration sites
  - Compaction prevented efficient removal of media from the lead vessel as demonstrated in the pilot, but did not result overall failure of operations
  - Robust stainless steel nozzles are much preferred over plastic nozzles

## Appendix A: Analytical Methods for Water Sample Analysis



TECHNICAL DOCUMENT NO. TD2003-370

### *Separation Science Section*

ecc: J. H. Barrett   B. Hoffman  
C. Bevan   E. Lundquist  
C. Hickey   J. T. Mc Nulty

2003/09/29

SUBJECT:        **DETECTION OF PPB LEVELS OF PERCHLORATE IN ION  
EXCHANGE RESIN EXTRACTS BY ION  
CHROMATOGRAPY/MASS SPECTROMETRY**

AUTHOR:        Alexander, James N.

WORK DONE BY: Breaux, Alfred J., Alexander, James N.

REQUESTED BY: Carlin, William H.

SAP NO.:        8000473

- REFERENCES:
1. Ion Exchange Resin Screening for Selective Perchlorate Removal from Ground Water, A. M. Rothman and J. N. Alexander, TD2003-044, 01/27/03.
  2. Dionex Application Note 134, "Determination of Low Concentrations of Perchlorate in Drinking and Ground Waters Using Ion Chromatography" and Product Note, "IonPac AS16 Anion-Exchange Column".
  3. Improved Method for the Determination of Trace Perchlorate in Ground and Drinking Waters by Ion Chromatography, P. E. Jackson, et al., *J. of Chromatography A*, 888 (2000) 151-158.



4. Analysis of Perchlorate in Groundwater by Electrospray Ionization Mass Spectrometry/Mass Spectrometry, C. J. Koester, et al., *Environ. Sci. Technol.*, 34 (2000) 1862-1864.
5. Determination of Perchlorate at Trace Levels in Drinking Water by Ion-Pair Extraction with Electrospray Ionization Mass Spectrometry, M. L. Magnunson, et al., *Anal. Chem.*, 72 (2000) 25-29.

OBJECTIVE: Develop an ion chromatography/mass spectrometry (IC/MS) method to analyze ion exchange resin effluents for ppb levels of perchlorate.

SUMMARY: Pollution, primarily from defense plants, has resulted in wells tainted by perchlorate in 22 states from Massachusetts to California. Ion Exchange Research (IER) is actively pursuing the development of a perchlorate selective ion exchange resin, which can significantly lower the cost of treating contaminated municipal wells, and other wells near sites of contamination. IER has identified final ion exchange resin candidates and competitive resins for comparison testing. This testing required the measurement of ppb levels of perchlorate in column effluents. We developed an ion chromatography/mass spectrometry method to study these low ppb levels.

KEYWORDS: perchlorate; ground water; drinking water; Ion Exchange; IER, IC/MS

**BACKGROUND:**

Pollution, primarily from defense plants, has resulted in wells tainted by perchlorate in 22 states from Massachusetts to California. The concern is that perchlorate is selectively concentrated in the thyroid and it displaces iodide, which is required for proper thyroid function and related hormone balance in the body. Safe levels have yet to be defined by the EPA, but states have set levels as low as 1 ppb. Ion Exchange Research is actively pursuing the development of a perchlorate selective ion exchange resin, which can significantly lower the cost of treating contaminated municipal wells, and other wells near sites of contamination. IER needed to determine the selectivity of various resin candidates and competitive resins for perchlorate in the presence of chloride, nitrate, and sulfate, common ground water anions. The selectivity determination required the ability to measure ppb levels of perchlorate in solution. We developed an ion chromatography/mass spectrometry method to study these low ppb levels.

**EXPERIMENTAL:****An anion exchange chromatographic isocratic method with electrospray ionization and mass spectrometry detection (IC/ESI-MS) was used in the perchlorate analysis.**Sample Preparation

The anion exchange extracts were analyzed as-is or diluted with Milli-Q water and transferred to 1.5-mL autosampler vials. Samples were diluted to reach a perchlorate concentration within the calibration curve. Two injections were made from each vial.

Perchlorate Calibration Standard Preparation

Weigh 0.13 g of Sodium Perchlorate (A. C. S. reagent, 99%) [81.2% perchlorate] into a 1 oz vial, then add Milli-Q water to a total of 10.6 g (9,958 ppm, Stock 1). Shake and/or sonicate for 10 minutes to dissolve solids. Weigh 0.1 g of Stock 1 into a 1 oz vial, and then add Milli-Q water to a total weight of 10 g (100 ppm). Shake for 1 minute. Weigh 0.2 g of 100 ppm standard into a 1 oz vial, and then add Milli-Q water to a total weight of 20 g (1 ppm). Weigh 6 g of 1 ppm standard into a 1 oz vial, and then add Milli-Q water to a total weight of 8 g (750 ppb). Weigh 2 g of 1 ppm standard into a 1 oz vial, and then add Milli-Q water to a total weight of 4 g (500 ppb). Weigh 1 g of 1 ppm standard into a 1 oz vial, and then add Milli-Q water to a total weight of 5 g (200 ppb). Weigh 0.75 g of 1 ppm standard into a 1 oz vial, and then add Milli-Q water to a total weight of 5 g (150 ppb). Weigh 1 g of 1 ppm standard into a 1 oz vial, and then add Milli-Q water to a total weight of 10 g (100

ppb). Weigh 5 g of 100 ppb standard into a 1 oz vial, and then add Milli-Q water to a total weight of 10 g (50 ppb). Weigh 2 g of 50 ppb standard into a 1 oz vial, and then add Milli-Q water to a total weight of 10 g (10 ppb). Weigh 5 g of 10 ppb standard into a 1 oz vial, and then add Milli-Q water to a total weight of 10 g (5 ppb). Weigh 2 g of 5 ppb standard into a 1 oz vial, and then add Milli-Q water to a total weight of 10 g (1 ppb). Weigh 5 g of 1 ppb standard into a 1 oz vial, and then add Milli-Q water to a total weight of 10 g (0.5 ppb). Weigh 4 g of 100 ppb standard into a 1 oz vial, and then add Milli-Q water to a total weight of 10 g (0.2 ppb).

Instrument: 1. Dionex DX-500 IC system equipped with GP40 Gradient Pump, AS3500 autosampler, and ED40 Electrochemical detector  
2. Waters ZQ mass spectrometer with nebulized assist electrospray ionization (ESI)

Column: Dionex IonPac AS11, 2 x 250 mm

Guard column: Dionex IonPac AG11, 2 x 50 mm

Eluent:

Time	200 mM NaOH	Milli-Q water
Init.	50	50
9	50	50

Flow rate: 0.25 mL/min

Back pressure: 825 psi

Injection volume: 45 µL (partial loop injection mode from a 100 µL loop)

Column temp.: 30°C

Detection: Suppressed conductivity and mass spectrometry

Suppressor: ASRS-Ultra (Dionex) 2 mm @ 100 mV

Regenerant: Milli-Q water, 3 mL/min

#### MS conditions

ESI tip voltage:	-2.40 kV	Source temp.:	120°C
Cone:	40 V	Desolvation temp.:	300°C
Extractor:	1 V	Desolvation gas:	N <sub>2</sub> @ 400 L/h
RF lens:	2.5 V	Cone gas:	N <sub>2</sub> @ 100 L/h
Collection mode:	centroid		

#### *Experiment 1 (selected ion monitoring, [SIM])*

Mass: *m/z* 98.8

Dwell time: 1.0 s

Inner scan delay: 0.1 s

Run time: 9 min.


## RESULTS AND DISCUSSION:

A previous report (Ref 1.) discusses the studies for resin screening which were done with water containing perchlorate in the presence of either sulfate or chloride, two ions which would be problematic in the field. The resin bound perchlorate was eluted with a high concentration of sodium nitrate. The detection limit for perchlorate was 0.5 ppm and was accomplished with suppressed conductivity detection.

For the next series of studies IER was interested in measuring low ppb levels of perchlorate in water from final candidate resins. A review of the literature showed that Dionex (Ref 2 and 3) was able to achieve 2 ppb limits of detection using suppressed conductivity detection by making large volume injections (1 mL) followed by an isocratic separation. Another approach to low level detection is to use a mass spectrometer as a detector. Two groups have tried this using electrospray ionization. One group (Ref 4.) used MS/MS to selectively identify perchlorate. They did not use any chromatography to separate perchlorate from other ions and found that ion suppression from other anions like bicarbonate, chloride, and sulfate limited their detection of perchlorate to 0.5 ppb. To measure levels this low required the use of the method of standard addition for accurate quantification. Another group (Ref 5.) also used flow injection analysis to measure perchlorate down to the 0.2 ppb range. Their approach utilized an extraction method that required a 500 mL water sample. A cationic surfactant is added to the water sample, which forms an ion-pair with perchlorate, and then the ion-pair is extracted into dichloromethane. Both approaches are at the detection limits we desired but are complicated in analysis and sample preparation.

Based on our experience with ion chromatography and mass spectrometry it seemed likely that IC/ESI-MS could be used to reach the detection limit of 0.2 ppb. In addition, this could be accomplished without any complicated sample preparation other than dilution with water.


The key component that allows us to measure ppm and ppb levels of anions with conductivity detection is the suppression device. This device is located after the separation column (Figure 1) and converts the mobile

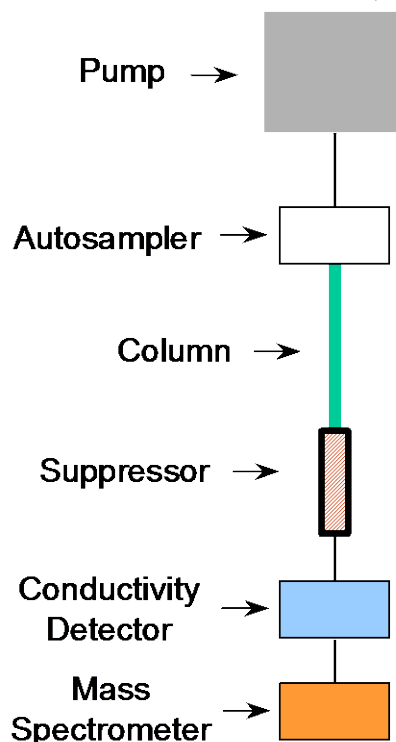

**Figure 1.** Schematic of IC/MS system.

phase that contains mM levels of NaOH into water. With a low conductance background conductivity detection can be used. The mass spectrometer also requires a low conductance background for measuring low levels of ions in the gas phase. Figure 2 below shows a simple schematic of the suppressor operation.

In addition to using the suppressor, two other modifications were made to the

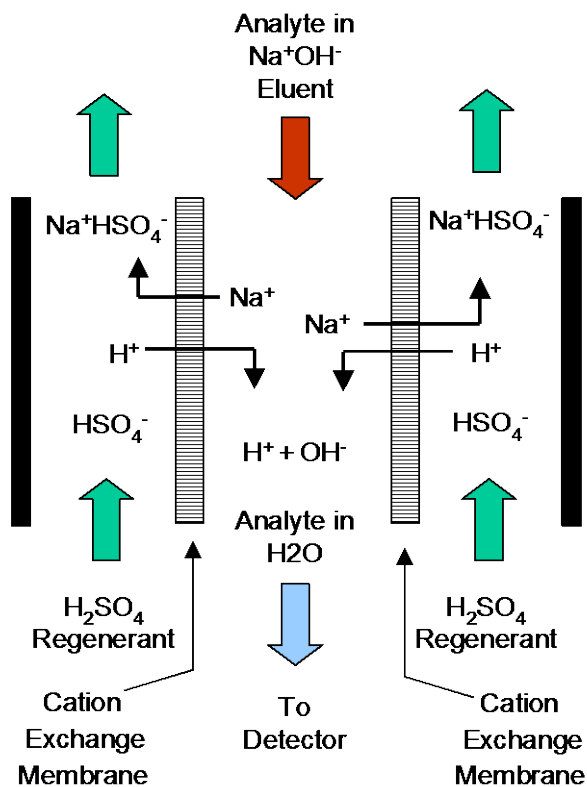

**Figure 2. Schematic of suppressor used in anion exchange chromatography.**

method. One, was injecting a larger sample volume than typical. For this analysis we injected 45  $\mu\text{L}$  without seeing any band broadening effects. The second step that we took was to optimize the electrospray source parameters for obtaining high sensitivity for perchlorate before the analysis. Thus, the method development needed to make this analysis successful was minimal.

Figure 3 shows a separation of a 0.5 ppm perchlorate standard with conductivity and MS detection. This shows that with the conductivity detector we are at the limit of detection at this level, but with the mass spectrometer in the selected ion monitoring (SIM) mode ( $m/z$  98.8) there is plenty of signal. A mass spectrum for perchlorate is shown in Figure 4. A series of perchlorate standards ranging from 0.2 to 1 ppb is shown in Figure 5 and Figure 6 shows the corresponding calibration curve. This data demonstrates that with mass spectrometry detection that there is

linearity over this calibration range. A broader calibration range is shown in Figure 7.

Figure 8 shows a wash extract from a resin candidate. The chromatograms show excellent peak shape for perchlorate and the ability to measure low levels in the presence of sulfate. Table I lists the results of a recent low-level perchlorate analysis.


## CONCLUSIONS:

Using ion chromatography/mass spectrometry we were able to provide perchlorate uptake information for a series of resins that enabled IER to identify a candidate anion resin for water remediation. We looked at effluent from resins while passing a water solution containing perchlorate in the presence of sulfate, nitrate, or chloride. We also looked at regeneration effluents to determine the amount of perchlorate that was released from the resin when regenerated with a nitrate solution. From this testing, one resin was identified as a lead candidate for a disposable perchlorate remediation resin.


The LOD for perchlorate, using this method, and based on a perchlorate standard in water, is 0.2 ppb.

*James N. Alexander III*

JNA:jwt  
Attachments

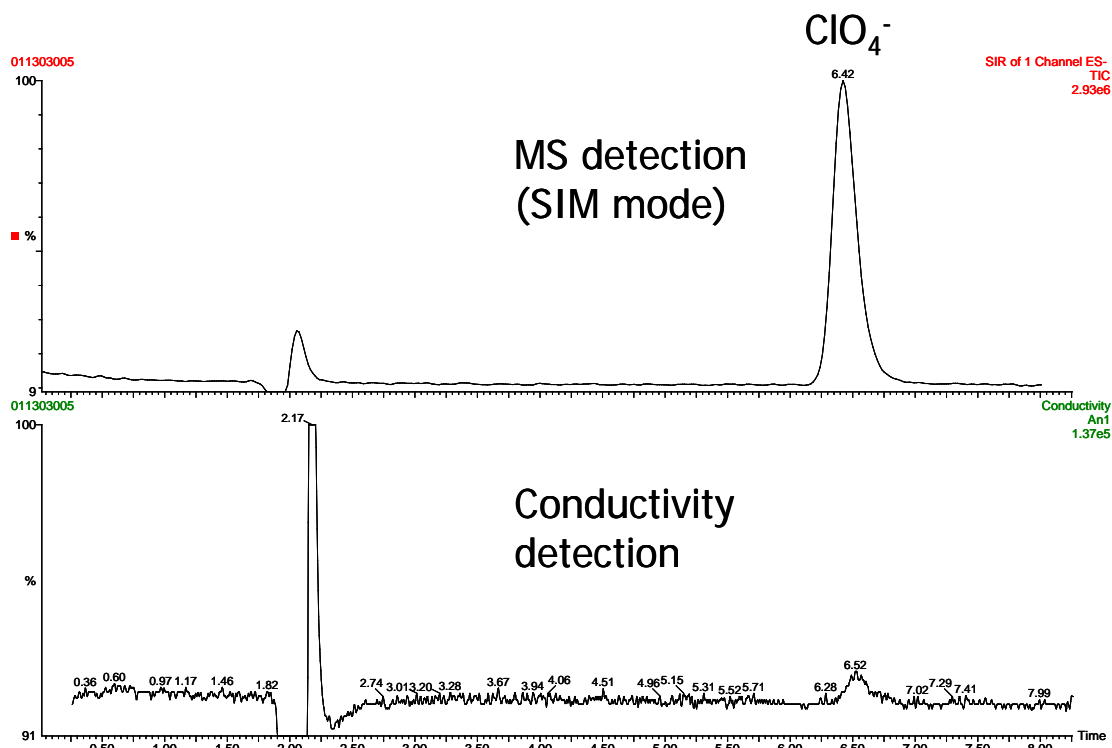


**Figure 3.** Separation of a 0.5 ppm perchlorate standard by mass spectrometry (top) and conductivity (bottom) detection modes.

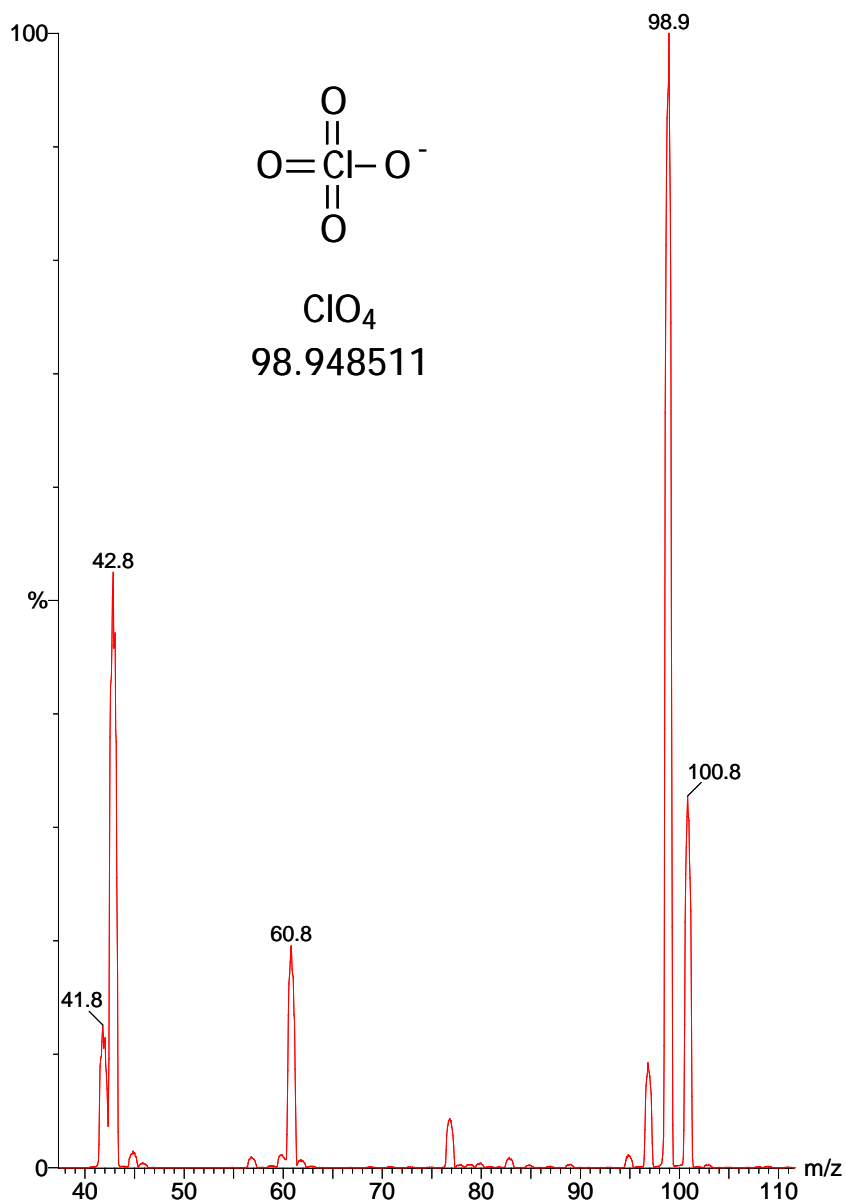


**Figure 4.** Mass spectrum of a 1 ppm perchlorate standard obtained by infusion.



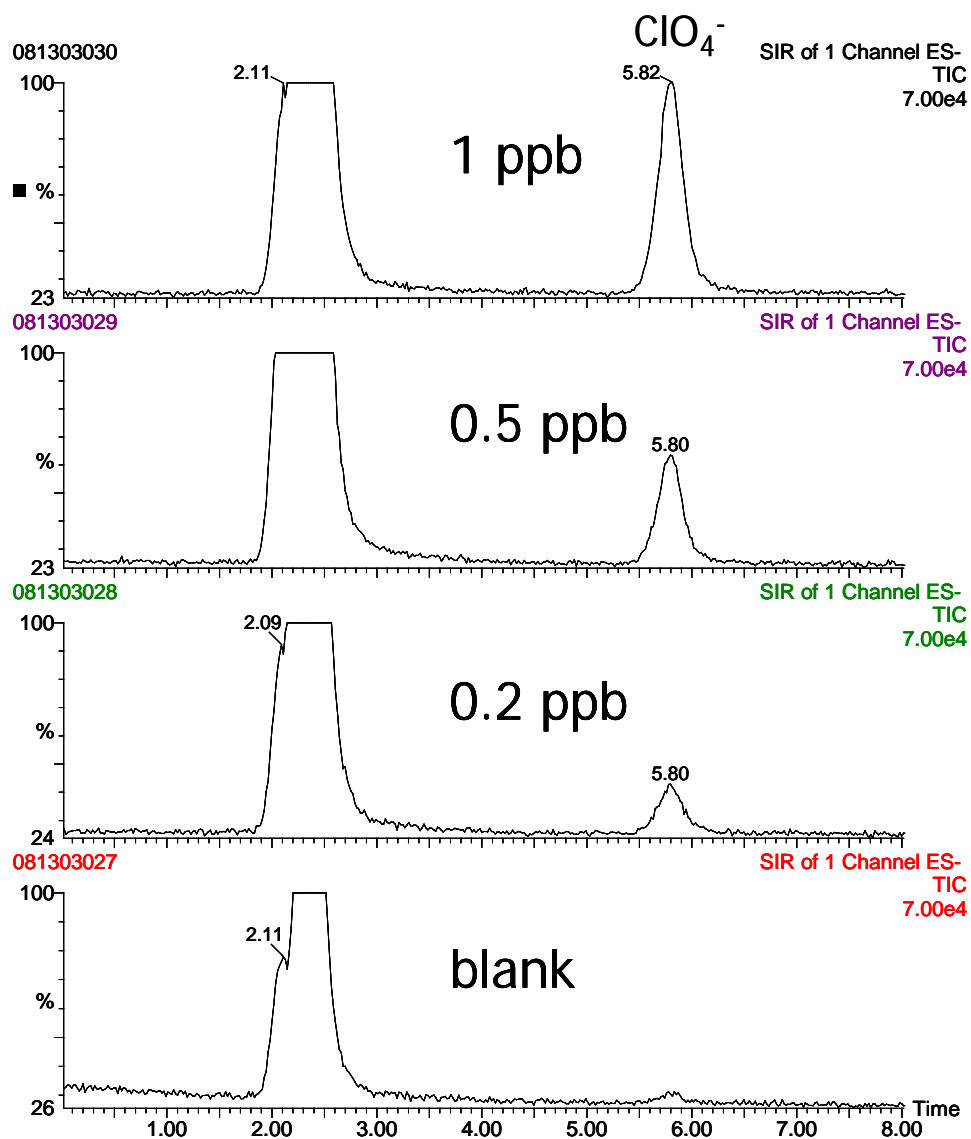


**Figure 5.** Separation of three low ppb perchlorate standards with mass spectrometry detection.

Compound name: Perchlorate (SIR, 99)  
 Correlation coefficient:  $r = 0.999860$ ,  $r^2 = 0.999720$   
 Calibration curve:  $14578.8 * x + -395.32$   
 Response type: External Std, Area  
 Curve type: Linear, Origin: Exclude, Weighting: Null, Axis trans: None

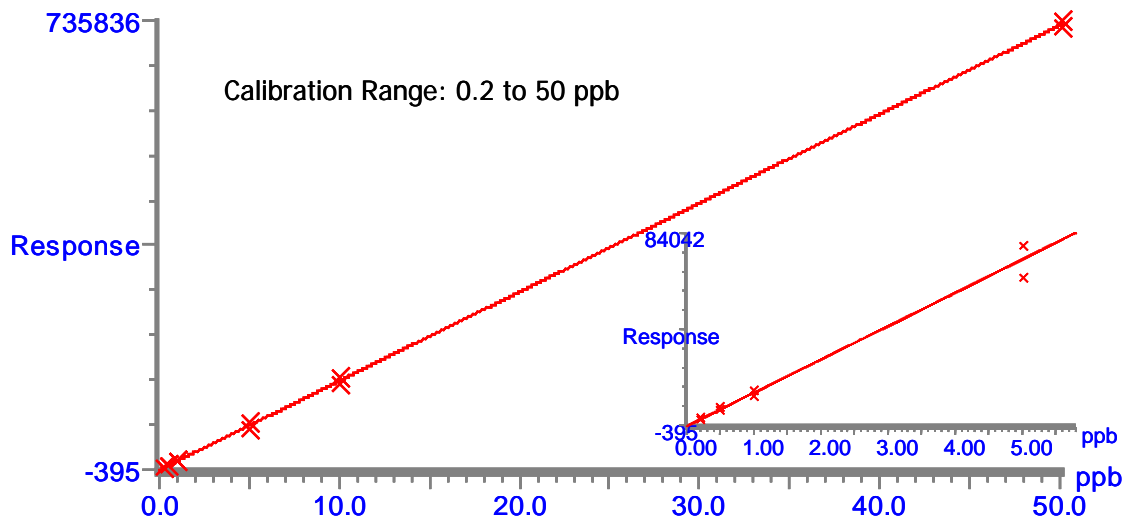


**Figure 6.** Calibration curve for perchlorate with mass spectrometry detection. Insert shows the linearity at low ppb levels.

Compound name: Perchlorate (SIR, 99)  
 Coefficient of Determination: 0.998936  
 Calibration curve:  $-4.65463 * x^2 + 12895 * x + 58513.1$   
 Response type: External Std, Area  
 Curve type: 2nd Order, Origin: Exclude, Weighting: Null, Axis trans: None

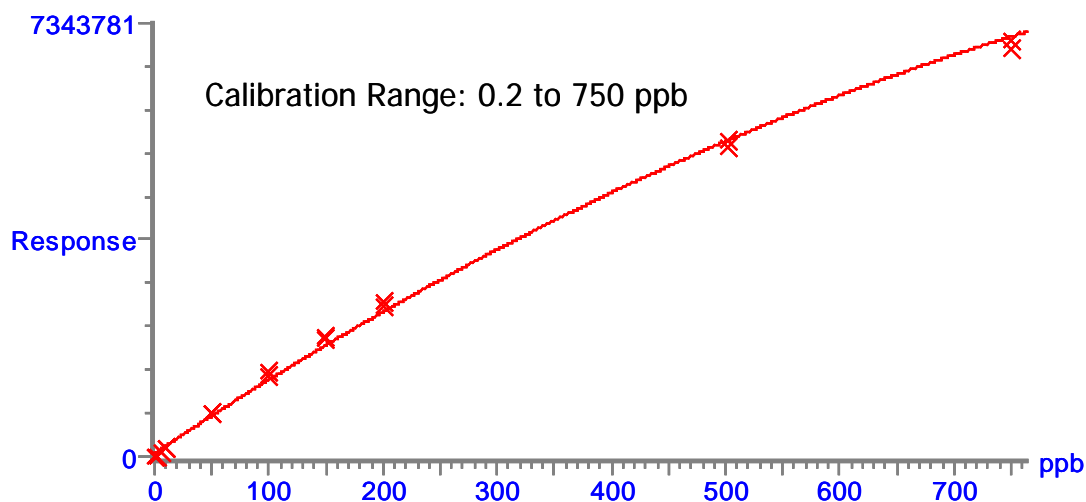

**Figure 7.** Calibration curve for perchlorate with mass spectrometry detection over a broad calibration range.

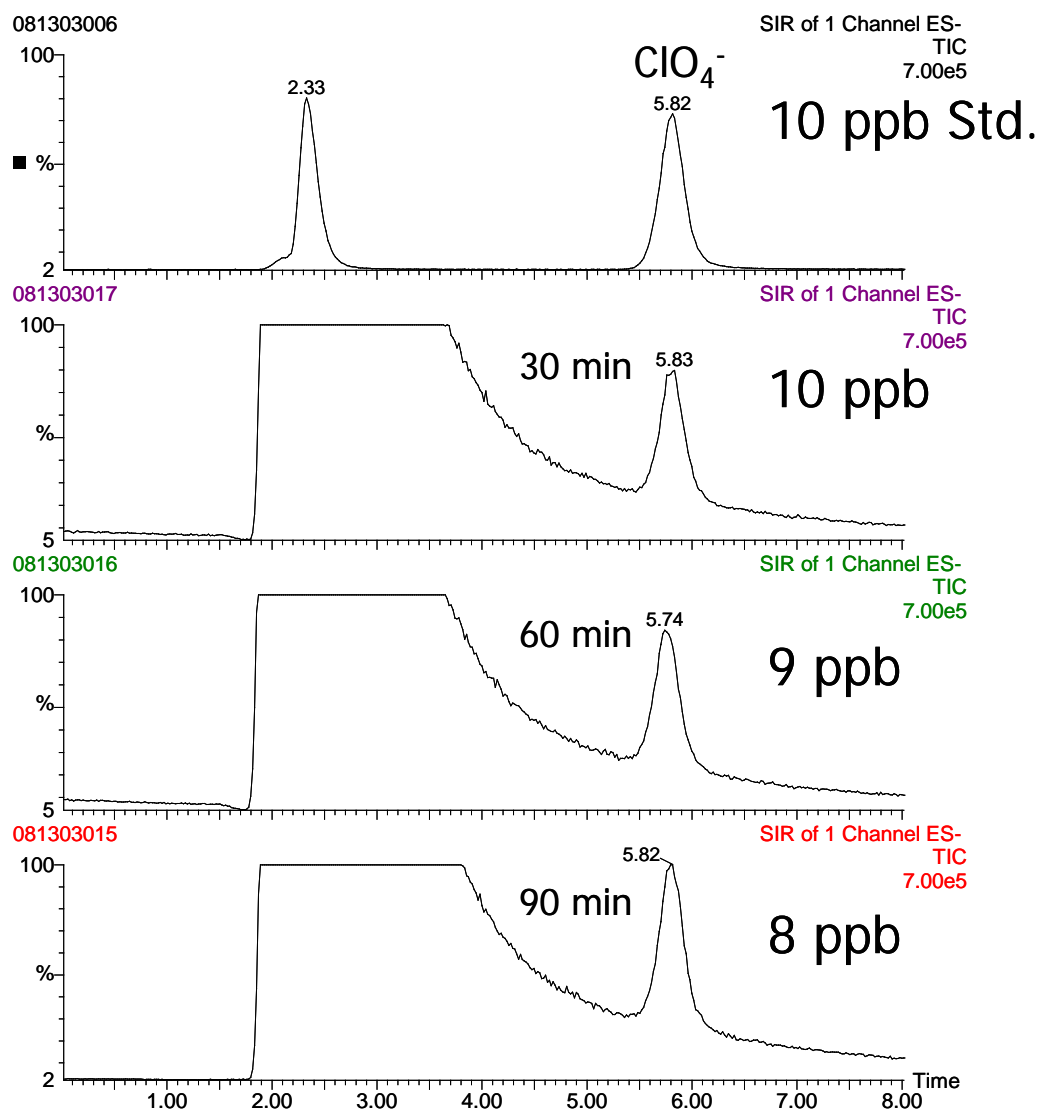

**Figure 8.** Separation of a 10 ppb perchlorate standard and three effluent samples (different collection times) that contain low ppb perchlorate levels in the presence of sulfate.

**TABLE I.**  
**Ultimate Dilution Test Experiments**

Run #	Resin	% R-CIO4	Background	Results in ppb Collection Time		
				0:30	1:00	1:30
75	PWA2 (Plant sample)	2.0	SO4	10	9	8
76	Dowex 1 (light color)	2.0	SO4	878	863	867
77	PWA2 (Plant sample)	1.0	NO3	19	19	18
78	Dowex 1 (light color)	1.0	NO3	1140	1135	1122
79	PWA2 (Lot 304621)	1.0	NO3	28	23	19
80	PWA2 (Lot 327958)	1.0	NO3	27	21	19

## **Appendix B: Quality Assurance Project Plan (QAPP)**

### **B.1 Purpose and Scope of the Plan**

The purpose of this Quality Assurance Project Plan (QAPP) is to ensure that the experimental protocols and practices for this demonstration project will yield performance and cost information that is both accurate and useful for making water treatment technology decisions. It addresses sampling protocols for water and resin samples; analytical methods and practices to ensure accuracy, repeatability and precision; data recording, transcribing, storage, interpretation and reporting for all key independent and dependent variables.

### **B.2 Quality Assurance Responsibilities**

There will be three primary areas of quality oversight; field operations, analytical practices, and data management.

- Jim Summerfield (Principal Investigator) will have responsibility for managing quality in the field operations including the daily data collection by the utilities, the water sampling, the resin change-outs, and other field operations and will manage the quality of data, data storage, interpretation and reporting.

### **B.3 Data Quality Parameters**

There are four (4) key independent variables from which all other information and results flow. These are: water flow rate, water volume treated (as related to a given sample of water or resin), perchlorate content of the bulk water (at any given point in the resin column, and perchlorate content of the ion exchange resin (as a function of bed height). Each of these independent variables requires a validation to ensure the data points are usable.

#### Water Flow Rate and Treated Water Volume

Flow rate and treated water volume will be determined by a mechanical flow meter and monitored daily. Calibration of the flow meters and validation of these data are described in Section B4. Because of the mass of water treated in this demonstration program, other forms of validation are impractical. It is expected that there will be significant variation in flow rates and volumes (as a function of time) because of demand fluctuations on the system. Thus, no statistical tools will be applied to these data.

#### Water Perchlorate Content

The perchlorate contents of the water entering, exiting and at various points in the bed are the most critical pieces of information for the demonstration project. The validation and calibration practices and procedures will be discussed in section C.4. of this QAPP. To ensure that these samples are representative of their parts of the system, the sample taps are designed to extend into the ion exchange bed at least 6 inches which eliminates the impact of wall effects on distribution within the ion exchange bed. This design criterion will be validated during final inspection of the equipment.

Appendix D describes the water sampling protocol which will be used to ensure water samples are representative of the water in the bed (or in the inlet/outlet piping) at the time of sampling. It also describes the storage and labeling practices to be used to identify and protect the integrity of each sample. Duplicate samples will be taken for ALL water sampling and sample sets will be shipped separately to avoid loss of samples via shipping error.

Because the water from this demonstration program will be served to the public via the participating utilities, there will be occasion for the water to be tested at state (of California)-certified laboratories. This opportunity will be used to validate our sampling and analytical methods.

#### Resin Perchlorate Content

The perchlorate content of the ion exchange resin at the end of each cycle is a key, independent variable for completing the perchlorate mass balance. All of the resin removed from the vessel during resin change outs will be collected and homogenized by agitation. Core samples will be taken from this resin to ensure the sample is representative of the entire “batch” of exhausted resin.

Additionally, during at least one of the resin replacements, a core sample will be taken from the primary service vessel prior to the resin replacement. Analyses from various fractions of this sample will be compared to the homogenized sample as a check on sample precision. The results of these sample analyses can be compared to the calculated perchlorate loadings based on fundamental equilibrium equations. Because these resin analytical techniques are developmental, no defined range of agreement will be set as a precondition to the acceptability of these data.

### **B.4 Calibration Procedures, Quality Control Checks and Corrective Action**

#### Water Flow rate and Volume Treated

The flow rate and treated volume are both determined by a mechanical flow meter. These meters are calibrated at the time of production. This calibration will be accepted for the first water treatment cycle. During each resin change out, an external ultrasonic flow meter will be used to validate the mechanical flow meters. These flow rates should agree to within 3%. If the measured rates should not agree, the ultrasonic flow meter will be calibrated in the shop and the flow test

will be repeated. If the flow rates should still differ by >3%, the mechanical flow meter will be replaced.

#### Treated Water Volume

It will be assumed that the flow volume measurement is accurate if the flow rate test should be accurate. Flow and volume data will be recorded on a daily basis by utility operating personnel. These data will be audited by the water sampling service company during each water sampling event to ensure data entries are occurring on time and in a complete manner.

#### Water Perchlorate Content

The calibration of the ion chromatograph as well as the validation of the ion chromatography test method is described in Appendix A (Analytical Methods for Water Sample Analysis) of this Demonstration Plan. During each of the targeted 11 sample sets, duplicate samples will be run on the 1<sup>st</sup>, 5<sup>th</sup>, and last (9<sup>th</sup>) sample from the set. Additionally, a control sample (of known perchlorate content) will be run with each set of samples analyzed.

Data from the water analyses will be plotted (x-axis = perchlorate content of water, y-axis = height in the ion exchange bed) to graphically present the shape, size, and progression of the perchlorate mass transfer zone within the ion exchange resin bed. In this manner, perchlorate breakthrough can be monitored and compared to the equilibrium, predictive model. It is expected that these data will be comparable within 10%. If they should not agree to within 10%, a technical review will be initiated. If this technical review should not identify the discrepancy in the data versus the model, a “lab shadow” test will be conducted using samples of the raw water from the utility and controlled conditions in ½ in. diameter laboratory columns.

### **B.5 Demonstration Procedures**

The most significant unknown in this demonstration project is the hydraulic behavior of the resin under the resin removal conditions. Significant fluidization around the central lateral, used to hold the upper portion of the bed in a packed state, could result in loss of unexhausted resin and, thus, lower resin utilization more than desired. Sight glasses will be installed in the vessels to assist in visual observations of the resin behavior during change outs. Conditions such as flow rates and valve opening/sequencing will be amended as needed during the demonstration project to minimize resin mixing and turbulence. The final proof statements will be generated from quantitative measurements of perchlorate on the ion exchange resin and not these observations.

### **B.6 Calculation and Data Quality Indicators.**

The quality of the data will be reflected in the ability to close the mass balance on perchlorate. The mass of perchlorate removed by the system is calculated by the volume of water treated over a given period of time multiplied by the difference in perchlorate concentration into and out of the primary service vessel.

$$M_p = V_w \times (P_i - P_o)$$

where:

$M_p$  = mass of perchlorate loaded over time period of interest,

$V_w$  = Volume of water treated over time period of interest,

$P_i$  = inlet perchlorate concentration, and

$P_o$  = outlet perchlorate concentration.

The result of the above equation will be compared to the mass of perchlorate that is stripped from the resin and measured by Ion Chromatography.

The loading capacity of the resin is determined by dividing the mass of perchlorate removed by the amount (volume) of resin employed for this removal.

$$Cap = M_p / V_r$$

where:

Cap = the capacity of the resin and

$V_r$  = volume of resin.

## **B.7 Performance and System Audits**

All performance and system audits will be performed as needed by the Principle Investigator, Jim Summerfield.

## **B.8 Quality Assurance Reports**

All Quality Assurance activities will be documented by QA Officer on a quarterly basis. This documentation will include a description of audit practices, results, and recommended adjustments to the program/practices to improve or ensure quality. These reports will be copied to the Principal Investigator; maintained by the QA Officer; and included in the final project documentation.



## **B.9 Data Format**

Raw data for flow rate and treated volume will be collected in a log book as shown in Figure 13 on page 21 in the main body of this Demonstration Plan. These data will be transcribed and transmitted electronically to Jim Summerfield by the participating utility. These data will be incorporated into a Microsoft Excel<sup>TM</sup> spreadsheet to facilitate trending and further mathematical use.

The raw data from the perchlorate analysis of water samples will be printed from the Ion Chromatograph onto a results sheet. These data will be forwarded to Jim Summerfield who will transcribe this data into a Microsoft Excel<sup>TM</sup> spreadsheet to facilitate plotting, trending, and further mathematical use. If a contract is utilized, the data will be transmitted electronically to Jim Summerfield where it will be transcribed in a Microsoft Excel spreadsheet.

Procedures and observations during the resin change outs will be recorded in a log book.

## **B.10 Data Storage and Archiving Procedures**

All data will be maintained electronically on a central server (shared drive) or individual computer at the Dow Chemical Company and will be consolidated all data in one place for review and manipulation. Hard copies of all raw data will be maintained by Jim Summerfield and included with the final documentation from the Demonstration Project. This documentation will include both an electronic copy and a hard copy of this consolidated data.

## **Appendix C: Health and Safety Plan (HASP)**

### **C.1 Purpose and Scope**

The purpose of this plan is to ensure the health and safety of the personnel associated with the Dow Chemical Company's ESTCP demonstration project, the people who will receive water derived from this demonstration, and the local environment around each demonstration site. This plan will consider the water used to rinse, and transfer resin into and out of the system, the new and perchlorate-loaded ion exchange resin, and the treated water that is intended for distribution to the public.

Dow Chemical Company's role is to demonstrate the technology for removal of perchlorate from the water. It is the role of the participating utilities to perform all other treatments which could include filtration and disinfection and all other federal, state, and local sampling and testing for regulatory purposes.

### **C.2 Acute Health Hazards**

The materials handled during this demonstration project are water and ion exchange resin. Both of these materials are considered safe and non-toxic when exposed to normal levels. Material Safety Data Sheets for the ion exchange resin used as part of this demonstration project will be kept on site with the operations log-books.

Care will be taken to avoid acute hazards which may be encountered from off-loading and installing the systems because of the systems' sheer size and mass. A brief safety review will be conducted with the rigging personnel prior to off-loading the units from their delivery trucks. Potential hazards will be identified, and procedures to avoid them, will be determined and executed during the off-loading period. In the same manner, other installation hazards, such as the use of hand tools and ladders, will be reviewed with the contractor before installation work is initiated.

A general first aid kit will be assembled and presented at the site during start-up and resin change out procedures.

### **C.3 Chronic Hazards**

Again, there are no known chronic health hazards associated with exposure to water or ion exchange resins. The use of ion exchange resins in potable water use is governed by the EPA and by the CA Department of Health Services (CADHS). Amberlite<sup>TM</sup> PWA2 has been certified for use in potable water by the National Sanitation Foundation (NSF) and CADHS. The NSF pretreatment protocol requires a 20 BV rinse of the resin before water can be served to the public.

**C.4 Environmental Issues**

The rinse water from the 20 BV resin pre-rinse will need to be disposed of in a manner that meets local and state regulations. This water will be collected and/or discharged to the local waste water treatment facility. This is also true of waters that are used to transfer resin into and out of the system during resin loading and change-outs.

Exhausted ion exchange resin will contain several pounds of perchlorate. While this material is not toxic in this form, it will be disposed of via incineration to ensure perchlorate can not be released back into the environment from this spent resin.

## Appendix D. Water Sampling Procedure

Developed by J. Miers, July 7, 2006

### D.1 Purpose and Scope

The purpose of this procedure is to give guidance on how water samples should be taken for Dow Chemical Company's ESTCP demonstration project to ensure that samples are representative, labeled and handled properly such that the data these samples yield are both usable and valuable. This procedure is limited to water samples taken from the water taps provided on the ESTCP demonstration vessels. It addresses sampling procedures, sample containers, labeling, storage/handling, and shipping procedures.

### D.2 System Description

The ESTCP demonstration system consists of two, 8 ft. diameter x 4 ft. straight side ion exchange vessels piped in-series. The primary service vessel is a novel design and will include water sampling taps located every 6 in. up the straight side of the vessel. There will also be a water sample tap at the inlet and outlet to the primary service vessel as well as the outlet of the secondary (polishing) vessels. These sample taps will be ¼ in. diameter stems with manual ball valves for control. The sample taps on the straight side of the primary service vessel will extend 6 inches into the ion exchange bed to ensure there are no hydraulic wall effects to the sample location and will terminate in a screened opening to ensure resin does not exist the vessel during water sampling. Figure E1 shows a schematic diagram of the vessel system with the relative location and labeling of the sample taps.

Relative Location of Sample Taps for ESTCP System

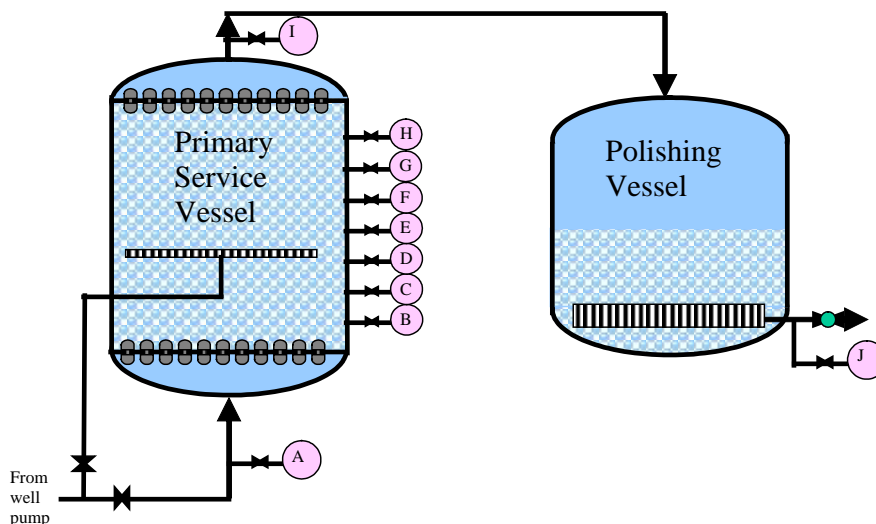


Figure E1. Relative Location of Sample Taps for ESTCP System.

### **D.3 Equipment**

Equipment required for the sampling procedure at each site includes:

- 20 – 150 ml plastic coated amber glass bottles with screw-on lids
- 20 sample labels
- Indelible ink pen
- Packaging tape
- Electrical tape
- Log-book for recording observations and issues during sampling.
- x 5-gallon liquid containers for waste water
- (1) 1- liter sample bottle for flushing taps
- Suitable box or container for water samples

### **D.4 Labeling Protocol**

Sample labels will use the follow information and identification sequence:

Dow Chemical Company  
ESTCP Demonstration Project ER0542  
Potable Water Sample – do not drink.  
X – mmddyy-Y

where:

X = C for the City of Colton site  
= R for the City of Rialto site  
= W for the West Valley Water District site  
mm = the month expressed numerically (use 0 the first digit for Jan. – Sept)  
dd = the day of the month (use 0 for the first digit for days 1-9)  
yy = the year (06 for 2006, 07 for 2007)  
Y = the sample tap identification as described in Figure E1. Use upper case letters for the first sample and lower case letters for the duplicate sample.

### **D.5 Sampling Procedure**

Complete all steps on each sample tap prior to progressing to the next sample tap. Sample the taps in order, from A-J.

1. Prepare the labels according to the protocol above but do not affix the labels until after the sample has been taken.
2. Using the 1-liter sample bottle, purge 1-liter of water from the sample tap prior to sampling. Place this water in the 5-gallon (or other) waste water containers.
3. Using a new, clean 150 ml amber bottle, rinse the bottle with 150 ml of water from the sample tap to be sampled. Place this water in the 5-gallon waste water containers.
4. Fill the 150 ml bottle to the top with water from the sample tap.
5. Tightly secure the screw on the lid of the sample bottle.
6. Wipe the outside of the sample bottle with a clean dry rag/towel to prepare for label.

7. Affix the appropriate label to the sample bottle; apply transparent packaging tape to the label to waterproof it; apply electrical tape to the lid to insure it remains in place during transport; and place the bottle in the box/container for safe transport.
8. Repeat steps 3-7 on the same sample tap for the duplicate sample.
9. Repeat steps 3-8 on each sample tap until all samples and duplicates have been taken.

Dispose of the waste water from this sampling procedure in an approved manner according to local regulations.

#### **D.6 Packaging and Shipping**

Prepare packages for the water samples such that the samples are not separated or damaged in transit. Send the primary and duplicate (if required) samples in separate packages with separate shipping labels such that there are two sample packages being shipped separately. Samples from multiple locations can be shipped together as long as the primary and duplicate samples are separated and sent separately. Initially, all water samples were sent to Dow's research facility in Spring House PA. However, they were no able to handle the enormous number water samples in a timely manner, therefore a state of California certified lab was contracted to perform the required analyses. The lab (Clinical Labs of San Bernardino) is the same lab used by the municipalities for their state certified water analyses.

Send all water samples to the following address:

Attn: Mr. William Carlin  
Bldg. 10, Room 208/R

The Dow Chemical Company  
Corporate Research Center  
727 Norristown Rd.  
Spring House, PA 19477

Or

Delivered by each municipality to:  
Clinical Labs of San Bernardino  
PO BOX 329  
San Bernardino, CA 92402